INTRODUCTION

This Parts Book has been published for the special benefit of the operator to simplify the servicing of parts for the Perkins 4.203 Industrial Engine, commencing Engine Number 2600251.

As much detail as possible has been incorporated in this list, and if the procedure outlined below is followed, supplies will be obtained with the minimum of delay.

SOURCE OF SUPPLY.

Parts are available from the following sources:—

- 1. The distributive organisations of manufacturers installing this engine as first equipment.
 - 2. Approved Perkins Service Signholders and Overseas Distributors.
 - 3. Recognised Motor Traders.

We are unable to deal with operators direct from the factory, and therefore supplies should be obtained by placing firm orders with one of the aforementioned sources of supply. To ensure you obtain the best results from your engine and to safeguard your own guarantee, FIT ONLY GENUINE PERKINS PARTS. These are readily obtainable throughout the world.

INFORMATION REQUIRED.

Whenever parts are ordered it is essential that full information is given to the supplier to enable him to identify your requirements. Complete descriptions and part numbers should always be stated, and in case of parts required for an individual engine, the engine type and number with vehicle details must be included.

SPECIAL PARTS.

This Book covers only standard 4.203 Industrial Engine parts and does not incorporate conversion or special parts supplied with engines. Supplements covering certain applications are published, but if a Supplement is not available, you should as in all instances quote full details outlined above to ensure you receive the correct parts.

INTRODUCTION (Continued)

ENGINE CLASSIFICATION.

Four Type of Basic Engines are incorporated in this list as follows:—

- List No. 187 Engines with water pump mounted on timing gear housing front cover 13—7/16" crs. (Low position).
- List No. 188 Engines with water pump mounted on cylinder head at 16—1/16" crs. (high position.)
- List No. 189 Engines with water pump mounted on timing gear housing front cover at 13—7/16" crs. (low position.)
- List No. 190 Engines with water pump mounted on cylinder head at 16-1/16" crs. (high position.)

Parts which are peculiar to any one engine specification are marked with the list number.


IMPORTANT NOTE.

All screw threads on this engine, except on certain items of proprietary equipment and the crankshaft, are unified series and American Pipe Series.

The items illustrated and described in the parts book are correct at the time of publication, but as developments are made, we reserve the right to alter or withdraw items without notice.

INDEX

SECTION 'A'	CYLINDER BLOCK Including:— Liners; plugs; studs; crankshaft rear end cover and water inlet connection.	Page 5
SECTION 'B'	CYLINDER HEAD Including:— Studs; guides; valves; springs; tappets; combustion chamber cap; lifting plate; exhaust manifold; water outlet body by pass connection and thermostat (For list No. 187 and 189 only).	9
SECTION 'C'	CRANKSHAFT Including:— Starting dog; flange; pulley; key; main bearings; connecting rods; big end bearings: pistons and rings.	13
SECTION 'D'	CYLINDER HEAD COVER Including:— Rocker shaft; springs; brackets and levers.	17
SECTION 'E'	AIR INDUCTION SYSTEM Including:— Air filter, induction manifold and cold starting heater.	19
SECTION 'F'	TIMING GEAR Including:— Camshaft; gears; hubs; housing; front cover; inspection cover and hydraulic pump facing cover.	21
SECTION 'G'	LUBRICATING OIL SYSTEM Including:— Sump; strainer; dipstick; suction pipe; pump; delivery pipes; filter; pressure feed piping and idler gear spray pipe.	25
SECTION 'H'	WATER PUMP Including:— Mounting plate on timing gear housing front cover (For list Nos. 187 and 189 only) Mounting plate on cylinder head and thermostat (For list Nos. 188 and 190 only).	31
SECTION 'I'	FUEL INJECTION EQUIPMENT Including:— Lift pump; filter and piping; injection pump; injection pipes and atomisers.	35
SECTION 'J'	ELECTRICAL EQUIPMENT Including:— Dynamo; pulley; belt; support bracket and adjusting lever.	43
SECTION 'K'	JOINTS & GASKETS	45
	NUMERICAL INDEX	47

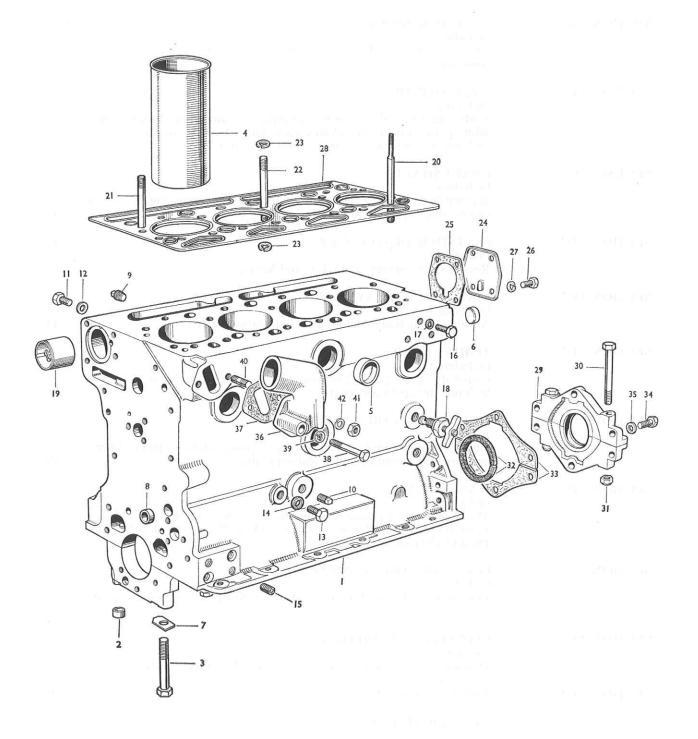

SECTION "A"


Cylinder Block


Plat	e Part				
Re	f. No.	Description		Qty.	Remarks
1	57563	CYLINDER BLOCK (ASSEMBLY)		1	
		Including:—			
		Cap, crankshaft main bearing—Front	***	1	
		Cap, crankshaft main bearing—Inter		,	Assimum fine" in inco-
		Cap, crankshaft main bearing—Middle			Not Serviced
		Cap, crankshaft main bearing—Rear		J	
2	0870001	Thimble, crankshaft main bearing cap to cylinder block		10	
3	0745105	Setscrew, crankshaft main bearing cap to cylinder block		10	
4	31358308	B Liner, cylinder block		4	
5	0650710	Plug, cylinder block water jacket		9	
6		Plug, cylinder block water rail			No longer fitted
7	0921108	Tab-washer, crankshaft main bearing cap setscrew		10	
	33117118	Washer, crankshaft main bearing cap shim		10	Eng. No. 2603772 onwards
8	0650566	Plug, cylinder block pressure rail—Front and Rear		2	
9	0650593	Plug, cylinder block—alt. drain cock position R.H. side of block		1	
10	0650594	Plug, cylinder block—lub. oil pressure switch boss	٠	2	
11	0746251	Plug, cylinder block—alternative dynamo position		2	
12	0920106	Washer, cylinder block—alterative dynamo position plug		2	
13	0746451	Plug, cylinder block—exhauster feed pipe hole		1	
14	0920109	Washer, cylinder block—exhauster feed pipe hole plug		1	
15	0650738	Plug, cylinder block—bearer facings		4	
16	0746451	Plug, cylinder block—top hole fuel filter facing		1)	Eng. No. 2601108 onwards
17	0920109	Washer, cylinder block-top hole fuel filter facing plug		1 }	
18	31419	Cock, cylinder block drain	***	1	
19	31134119	Bush, cylinder block—No. 1 camshaft bearing		1	
	32754411	Stud, cylinder block to cylinder head—long (also secures atomisers)	8)	
	0826624	Stud, cylinder block to cylinder head		10 >	Prior to Eng. No. 2606694
	0826622	Stud, cylinder block to cylinder head		1	
20	32754414	Stud, cylinder block to cylinder head-Long (also secures atomisers	s)	8)	
21	32524131	Stud, cylinder block to cylinder head		10 >	Eng. No. 2606694 onwards
22	32524128	Stud, cylinder block to cylinder head—Long		1)	
23	2726194	Gripring, cylinder block to cylinder head stud		2	
24	0240765	COVER, CAMSHAFT END		1	
25	0490699	Joint, camshaft end cover to cylinder block		1	
26	0746253	Setscrew, camshaft end cover to cylinder block		4	
27	0920053	Washer, camshaft end cover to cylinder block setscrew		4	
28	36812125	Gasket, cylinder head (Replaces 36812113)		1	

SECTION "A" Continued

Cylinder Block

Pla	te Part					
Re	f. No.	Description		Qty.	Remarks	
29	54361	COVER, CRANKSHAFT REAR END OIL S Including:—	SEAL (ASSEMBLY)) 1		
30	0096243	Bolt, crankshaft rear end cover clamping				
31	0574211	Nut, crankshaft, rear end cover clamping bo				
32	0730080	Seal, crankshaft rear end oil	Altel manufacture	. 2	liner open	
33	0490628	Joint, crankshaft rear end oil seal cover to cylind				
	36817134	Joint, crankshaft rear end oil seal cover to cylind	er block	. 1		
34	0746354	Setscrew, crankshaft rear end oil seal cover to				
		main bearing cap				
	33114118	Shim, crankshaft rear end oil seal cover setscrew				
35	0920299	Washer, crankshaft rear end oil seal cover setscre				
36	0201373	CONNECTION, CYLINDER BLOCK WATE	R INLET		List Nos. 187 and 189 only	
	0201493	CONNECTION, CYLINDER BLOCK WATE	R INLET	. 1	List Nos. 188 and 190 only	y
37	0490692	Joint, water inlet connection to cylinder block		. 1		
38	0096236	Setscrew, water inlet connection to cylinder block				
39	0920053	Washer, water inlet connection setscrew				
40	0826203	Stud, water inlet connection to cylinder block			Obsolete—Use 0746255/092	20106
41	0576002	Nut, water inlet connection retaining		. 1)[Jsed only with 0826203	
42	0920053	Washer, water inlet connection retaining nut	de trade of the	. 15		
	0746255	Setscrew, water inlet connection to cylinder block	can follow out an	. 1		
	0920106	Washer, water inlet connection setscrew				

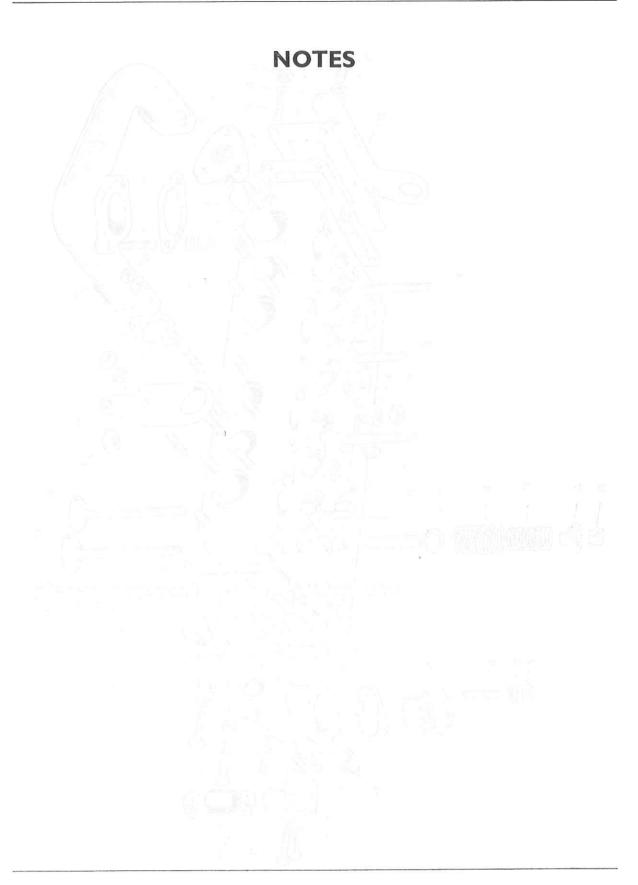

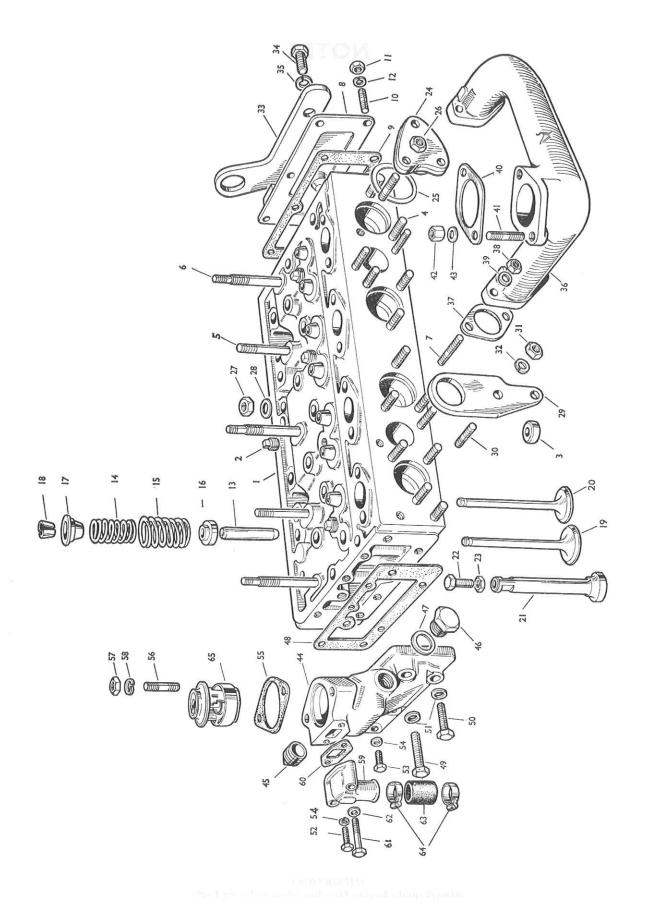

SECTION "B"

Cylinder Head


	te Part	Description		Qty	. Remarks
140	. INO.	Description		Qty	
	58400	CYLINDER HEAD (ASSEMBLY)	Lical such and made		Prior to Eng. No. 2601103 Obsolete—Use 82611/ 33411107
1	82611	CYLINDER HEAD (ASSEMBLY) Including:—		1	Eng. No. 2601103 onwards
2	0650590	Plug, cylinder head water jacket		4	
3	0650685	Plug, cylinder head water port	litobogga tendi	3	
4	0825258	Stud, cylinder head to combustion chamber		12	
5	0826479	Stud, cylinder head to rocker shaft bracket			
6	0825241	Stud, cylinder head to rocker shaft bracket-		3	Also secure cylinder head cover
7	0826232	Stud, cylinder head to exhaust manifold	K. Britan da i	4	MILIYO MOR EAST I
8	0941118	Cover, cylinder head rear end	Adjust the Light v.	1	
9	0490485	Joint, cylinder head rear end cover	JUNEAU RECORD	1	Replaces 0490029
10	0826002	Stud, cylinder head rear end cover to cylind	ler head \ Not incl.	6	Obsolete—Use 0746052
11	0576001	Nut, cylinder head rear end cover retaining	fin assy.	6	Used only with 0826002
	0746052	Setscrew, cylinder head rear end cover to cy	linder head	6	
12	0920052	Washer, cylinder head rear end cover setscr	ew	6	
	0420002	Guide, inlet and exhaust valve	leaght dimitables	8	Used only with 58400
13	33261723	Guide, inlet and exhaust valve	or Tell tellion a trea	8	Used only with 80123
14	0780007	Spring, inlet and exhaust valve—Inner	of about folight wing	8	obniva, wateg zajejši i pr
15	0780006	Spring, inlet and exhaust valve—Outer	eta abud eda na au.	8	
	0920516	Washer, inlet and exhaust valve spring locating	at Olgani zalimu zahov	8	Used only with 0420002
16	33411107	Washer, inlet and exhaust valve spring locating		8	Used only with 33261723
17	0150008	Cap, inlet and exhaust valve spring locating	wl'Xpag, politic gapts	8	
18	0230001	Cotters, inlet and exhaust valve spring	applications begin the	8	pairs of medical
19	31431261	Valve, inlet	Al Thur, Islante upo	4	
20	0910002	Valve, exhaust	real and replaced	4	
21	0860012	Tappet	elitaribetti Saartii ide	8	
22	0720677	Screw, tappet adjusting	A.W. dr. off Minne	8	
23	0576052	Nut, tappet adjusting screw locking	Pastrice Io	8	
24	37416203	Cap, combustion chamber	Time of the face	4	ou what a some fastures of
25	0490115	Joint, combustion chamber cap to cylinder head		4	Obsolete—Use 0490023
	0490023	Joint, combustion chamber cap to cylinder head		4	C C1 H 1/4 113
26	0.57.0.51	Stud, combustion chamber cap to cylinder head			See Cyl. Head (Assembly)
26	0576051	Nut, combustion chamber cap retaining		12	Con ContinuitA?
		Gasket, cylinder head			See Section 'A'
	0576054	Stud, cylinder head to cylinder block		J	Prior to Eng. No. 2606604
27	0576054	Nut, cylinder head retaining Nut, cylinder head retaining		19	Prior to Eng. No. 2606694 Eng. No. 2606694 onwards
27 28	33221312 0920006			19	Middle Stud
	0920008	Washer, cylinder head retaining nut PLATE, ENGINE LIFTING—FRONT		1	Obsolete—Use 36475706
29	36475706	PLATE, ENGINE LIFTING—FRONT	***	1	Obsolete—Ose 30473700
30	0826466	Stud, engine front lifting plate to cylinder head	BULL OF THE THE ISSUE		Obsolete—Use 0746453
	0576051	Nut, engine front lifting plate to cylinder head Nut, engine front lifting plate retaining		2	Used only with 0826466
	0746453	Setscrew, engine front lifting plate to cylinder he		2	030d Olly with 0020-00
	0920054	Washer, engine front lifting plate to cylinder he		2	
		PLATE, ENGINE LIFTING—REAR		1	
		Setscrew, engine rear lifting plate to end cover		1	
	0920054	Washer, engine rear lifting plate to end cover		1	
55	0720034	master, engine rear mang place setserew			

SECTION "B" Continued

Cylinder Head

	te Part	Description	Qt	v. Remarks
36	0540175	MANIFOLD, EXHAUST	1	
37	0490044	Joint, exhaust manifold to cylinder head	2	
31	0470041	Stud, exhaust manifold to cylinder head		See Cyl. Head (Assembly)
38	0576031	Nut, exhaust manifold retaining	4	
39	0920003	Washer, exhaust manifold retaining nut	4	
3)	0720003	FLANGE, EXHAUST MANIFOLD OUTLET		Quote Engine Number
40	0490032	Joint, outlet flange to exhaust manifold	1	
41	0826408	Stud, outlet flange to exhaust manifold	2	
42	0576030	Nut, outlet flange retaining	2	
43	0920004	Washer, outlet flange retaining nut	2	
44	37766321	BODY, CYLINDER HEAD WATER OUTLET (Prior to Eng. 1	No.)
77	37700321	2602867 Obsolete—Use 37766322/0746052)	1	
	37766322	BODY, CYLINDER HEAD WATER OUTLET		La compania de la compania del compania del compania de la compania del compania de la compania de la compania del compania de la compania de la compania de la compania del c
	57700522	(Eng. No. 2602867 onwards)	1	10 10 10 10 10 10 10 10 10 10 10 10 10 1
45	0650540	Plug, cylinder head water outlet body	1	1 1 1 1 1 1 1 1 1 1 1 1
46	0650203	Plug, cylinder head water outlet body	1	100-1
47	2411157	Washer, cylinder head water outlet body plug	1	Annual of the state of the stat
48	0490701	Joint, cylinder head water outlet body to cylinder head	1	5.000 PM
49	0746459	Setscrew, cylinder head water outlet body to cylinder head—Long	1	and the state of t
50	0746455	Setscrew, cylinder head water outlet body to cylinder head	1	Ta
51	0920155	Washer, cylinder head water outlet body setscrew	2	The House of the Control
52	0746054	Setscrew, cylinder head water outlet body to cylinder head—Top	two	I was the sales of
34	0740054	holes	2	And the second s
53	0746053	Setscrew, cylinder head water outlet body to cylinder head—		And the second second
55	0140055	Bottom two holes (Replace 0746153) (Used only with 37766231)	2	List No's. 187 and 189 only
	0746052	Setscrew, cylinder head water outlet body to cylinder head—		The same of the sa
	0740032	Bottom two holes (Used only with 37766322)	2	THE RESERVE AND A SECOND CO.
54	0920052	Washer, cylinder head water outlet body setscrew	4	4
54	0720032	CONNECTION, CYLINDER HEAD WATER OUTLET BODY	Y—	dia non a company
		TOP (QUOTE ENGINE NUMBER)		
55	0490184	Joint, cylinder head top water outlet connection to outlet body	1	for years a made
56	0826419	Stud, cylinder head top water outlet connection to outlet body	2	
57	0576051	Nut, cylinder head top water outlet connection retaining	2	
58	0920054	Washer, cylinder head top water outlet connection retaining nut	2	
59	37733191	CONNECTION, CYLINDER HEAD WATER OUTLET BO	DY	Annual Control of the State
0)	51100171	BY-PASS	1	
60	36862119	Joint, cylinder head water outlet body by-pass connection to be	ody 1	
61	0096235	Setscrew, cylinder head water outlet body by-pass connection to be	ody 2	
62	0920106	Washer, cylinder head water outlet body by-pass setscrew	2	1
63	0200080	Hose, cylinder head water outlet body by-pass to water pump	1	N = _7
64	0180066	Clip, by-pass pipe hose	2	The second of th
65	32550	Thermostat (Alternative 33841)	1	Just we constitute while help
05	52550	PIPE, LUB. OIL—CAMSHAFT CHAMBER TO CYLINDER		Torright the state of the state
		HEAD		See Section 'G'

NOTES

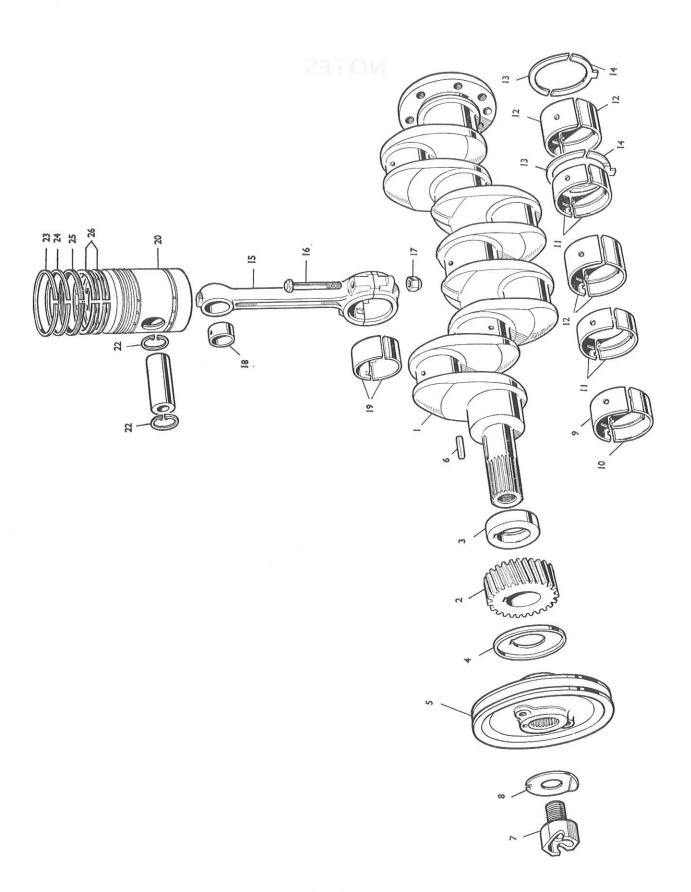

a tractification and resident section of species

SECTION "C"

Crankshaft

	te Part f. No.		Des	cription					Qty.	Remarks
				3					(Prior to Eng. No. 2601788
1	31315134	CRANKSHAFT	•••	***			***	***	1	Obsolete—Use 31315137/ 59617
	31315137	CRANKSHAFT			***	****	***		1	Eng. No. 2601788 onwards
2	0410228	Gear, crankshaft		777					1	
3	0330934	Distance-piece, crar			•••	***			1	
4	33176308	Flange, crankshaft				11			1	
5	31148615	Pulley, crankshaft			***		ul.		1	List No's. 187 and 189 only
- 17	31143675	Pulley, crankshaft	1000	aller in h	222	144"			1	List No's. 188 and 190 only
6	0500168	Key, crankshaft gea							1	as degree
7	0340025	Dog, starter							1	
8	31733508	Tab-washer, startin							1	Replaces 0920835
1.75	*58704	BEARINGS, CRA			COMPI		Γ STD.	SIZE		1115111
		(Pre-Finished)							1	Prior to Eng. No. 2601788
	*59617	BEARINGS, CRA								LUMB II
		(Pre-Finished)							1	Eng. No. 2601788 onwards
		Comprising:	37.51.5	1.020	.0.0.0		5/2/20	555		
9	31122321		shaft front	main to	p half s	td. size (Pre-Fin	ished)	1	Alternative 31122331
10	31122311	Bearing, cranks								
(3/40)		(Pre-Finished					1		1	Alternative 31122341
11	31121221	Bearing, cranks	·							
		(Pre-Finished					1		4	Alternative 31121231
	31123241	Bearing, cranks	*							
		std. size (Pre				and the second second second				Alternative 31123251
12	31123271	Bearing, crank	50.00		*:		botton	n half		
		std. size (Pre					J.,			Alternative 31123261
	For Engir	ne Sets of Cranksha	, ,		-		or .03	0" u/s		
		"A," "B" or "C"								
		idual Crankshaft Ma					30" u/s	quote		
		ing part numbers.	J	7202500 ASS		4.0	3200 11 6 000			1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
		e.g.								
		- 1750 Tables and a second	Std. Size							
		31122322	.010" u/s.							
		31122323	.020" u/s.							
		31122324	.030" u/s.							
13	31137191	Washer, crankshaft		ng thrust	—Тор				2	Replace 0920849
	31137192					p—.007"		prox.	as re	eqd. Replace 0920849A
14	31137201	Washer, crankshaft								Replace 31137171
	31137202									eqd. Replace 31137172
		35.7 31.1		.50				200		film n to the

SECTION "C" Continued


Crankshaft

Plate		
Ref. Part No. Description	Q	ty. Remarks
58705 CONNECTING ROD (ASSEMBLY)—MAJOR Comprising:—		4
15 52813 CONNECTING ROD (ASSEMBLY)—MINOR		4
16 0095250 Bolt, connecting rod to cap		8
17 2211155 Nut, connecting rod to cap bolt Included in 52813		8 Replace 0571276
18 0050119 Bush, connecting rod small end	u.	4
19 *31131171 BEARING, CONNECTING ROD BIG END TOP AND		
BOTTOM STD. SIZE (Pre-Finished)		8 Alternative 31131191
For Big End Bearings .010" u/s, .020" u/s or .030" u/s quote the following	part	
numbers:—		
e.g.		
31131171 Std. Size		
31131172 .010" u/s.		
31131173 .020" u/s.		
31131174 .030" u/s.		
†59635 PISTON (ASSEMBLY)—MAJOR (Replace 55779)		4 \int Prior to Eng. No. 2606630 Obsolete—Use 81870
†81870 PISTON (ASSEMBLY)—MAJOR		4 Eng. No. 2606630 onwards
Comprising:—		Used only with 59635
20 †55778 PISTON (ASSEMBLY)—MINOR		4 ✓ Obsolete—Use 81565 and
The Control of the Co		16 off 31365181
†81565 PISTON (ASSEMBLY)—MINOR	cor	4 Used only with 81870
21 0610516 Pin, gudgeon Included in 55778/		4
22 0170001 Circlip, gudgeon pin retaining \(\) 81565		8
23 0640135 Ring, piston compression—Plain		4 Top Groove
24 0640136 Ring, piston compression—Taper	L., 1	4 2nd Groove
25 31365181 Ring, piston compression	1	6 ∫ 3rd Groove—12 off with
		₹ 55778
26 0640134 Ring, piston scraper—Maxigroove		8 4th and 5th Grooves
81869 PISTON, RING KIT—SINGLE PISTON		1 \int \text{Prior to Eng. No. 2606630}—
Comprising:—		Used only with 55778
31362271 Ring, piston compression		1 Top Groove
31366511 Ring, piston compression		2 2nd and 3rd Groove
31377201 Ring, piston scraper	101000	1 4th Groove
31372171 Ring, piston scraper		1 5th Groove
0997282 Leaflet, fitting instruction		1
82133 PISTON, RING KIT—SINGLE PISTON	***	1 Seng. No. 2606630 onwards
Comprising:—		Used only with 81565
31362271 Ring, piston compression		1 Top Groove
31366511 Ring, piston compression		1 2nd Groove
31366521 Ring, piston compression		1 3rd Groove
31377201 Ring, piston scraper	5.0.0	1 4th Groove
31372171 Ring, piston scraper		1 5th Groove
31812901 Leaflet, fitting instruction		1
NOTES:—		

^{*}Pre-Finished Bearing are to size stated, and require no final fitting by hand.

[†]Pistons require topping before final assembly—refer to Service Literature.

NOTES

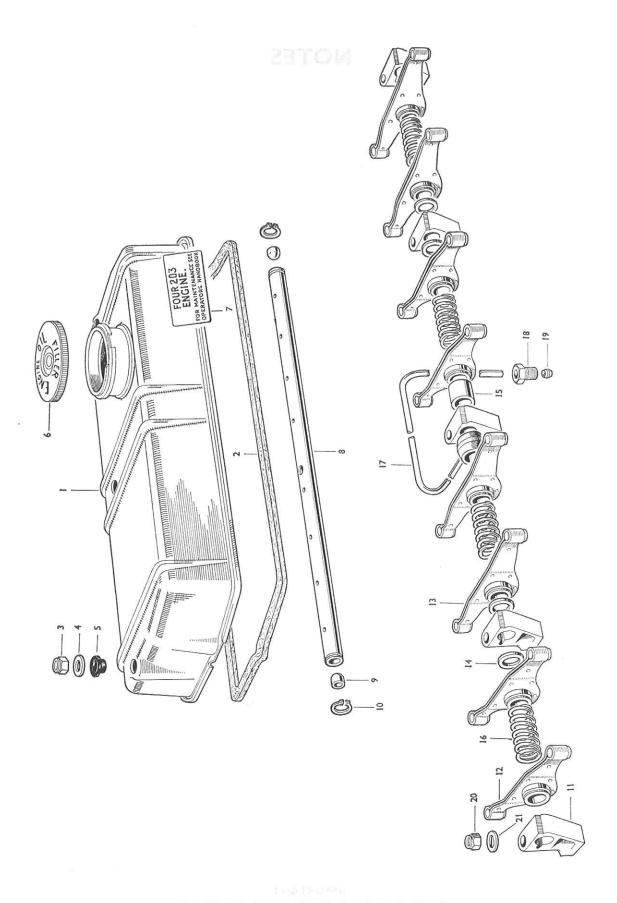


16

SECTION "D"

Cylinder Head Cover

Pla	te Part					
Re	ef. No.	Description				Qty. Remarks
1	37188514	COVER, CYLINDER HEAD				1
2	0490704	Joint, cylinder head cover to cylinder head				1
		Stud, cylinder head cover to cylinder head	***	***		See Section 'A'
3	0576102	Nut, cylinder head cover retaining	***			3
4	0920497	Washer, cylinder head cover retaining nut				3 Replace 0920003
5	0921337	Washer, cylinder head cover retaining nut		***		3
6	30476	Cap, lub. oil filler	•••			1
7	31815519	Label, engine name	***	***		1
	55437	SHAFT, ROCKER (ASSEMBLY)				1
		Comprising:—				
8	52703	Shaft, rocker c/w plugs	•••		• • • •	1
9	0650507	Plug, rocker shaft	***	***	***	2
10	0170033	Circlip, rocker shaft locating		•••		2
11	0101138	Bracket, rocker shaft	***	***	***	5
	0760001	Shim, rocker shaft	***			As Req.
12	0520430	Lever, rocker R.H	•••	•••		4
13	0520429	Lever, rocker L.H		•••		4
14	0330517	Distance-piece, rocker shaft—Short		•••	***	4
15	0330510	Distance-piece, rocker shaft—Long		***		1
16	0780009	Spring, rocker shaft	•••		***	4
17	0994748	Pipe, rocker shaft oil feed		1000	***	1_
18	0571351	Nut, rocker shaft oil feed				1 \ To Cylinder Head
19	0566002	Olive, rocker shaft oil feed pipe	***	***	• • • •	1 5
		Stud, rocker shaft bracket to cylinder head		•••		See Section 'B'
20	0576104	Nut, rocker shaft bracket retaining	***	300	***	5
21	0920004	Washer, rocker shaft bracket retaining nut	•••	•••	•••	5

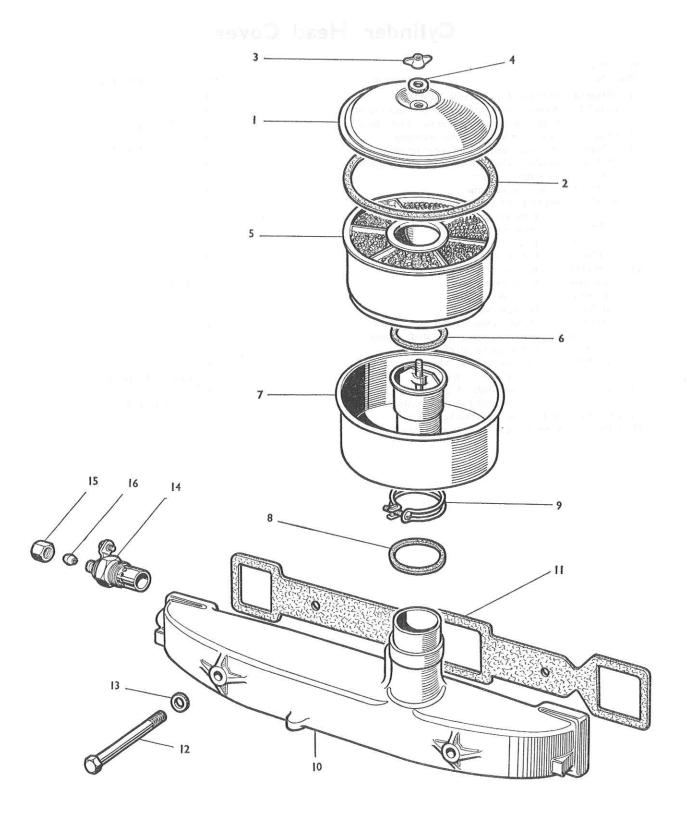


SECTION "E"

Air Induction System

Plate	e Part						
Ref	. No.	Descriptio	n				Qty. Remarks
	30399	AIR FILTER (ASSEMBLY)—(Alter Comprising:—	native	35254)	•••	•••	1 For List No's. 187 and 188 only
1	26510007	Cover, air filter					1
2	0490188	Joint, air filter cover to element					1
3	0571095	Wing-nut, air filter cover retainin	g				1
4	0920002	Washer, air filter cover retaining	nut				1
5	26510006	Element, air filter					1
6	0490189	Joint, air filter element sealing					1
7	26510005	Container, air filter element		***			1
8	0490579	Joint, air filter element container	seating	g			1
9	0180116	Clip, air filter clamping			***		1
	35254	AIR FILTER (ASSEMBLY)-(ALT	ERNA	TIVE TO	30399)		1 For List No's, 187 and 188 only
		Comprising:—					
	32546	Elbow, air filter		•••			1
	0571099	Nut, air filter					1
	32547	Element, air filter					1
	0490609	Joint, cover to container—Outer					1
	0490226	Joint, air filter element seating					1
	32548	Container, air filter	V				1
	32549	Silencer, air filter		y 3			1
10	37786563	MANIFOLD, INDUCTION		\$ S S			1 ∫ For List No's, 187 and 188
							only
	37786573	MANIFOLD, INDUCTION		•••			1 \int For List No's, 189 and 190
							only
11	0490042	Joint, induction manifold to cylinder	nead				1
12	0096640	Setscrew, induction manifold to cylind	ler hea	d			2
13	0920500	Washer, induction manifold to cylinde	er head	l setscrew			2 Replace 0920055
14	*2666103	Heater, cold starting fuel oil-Type 3:	57-5	***			1 Replaces 2666102
15	0576111	Nut, cold starting fuel oil heater pipe			•••		1
16	0566002	Olive, cold starting fuel oil heater pip	е	***	***		1
NO	re.						

*Component Parts supplied by Messrs. C.A.V. Ltd.

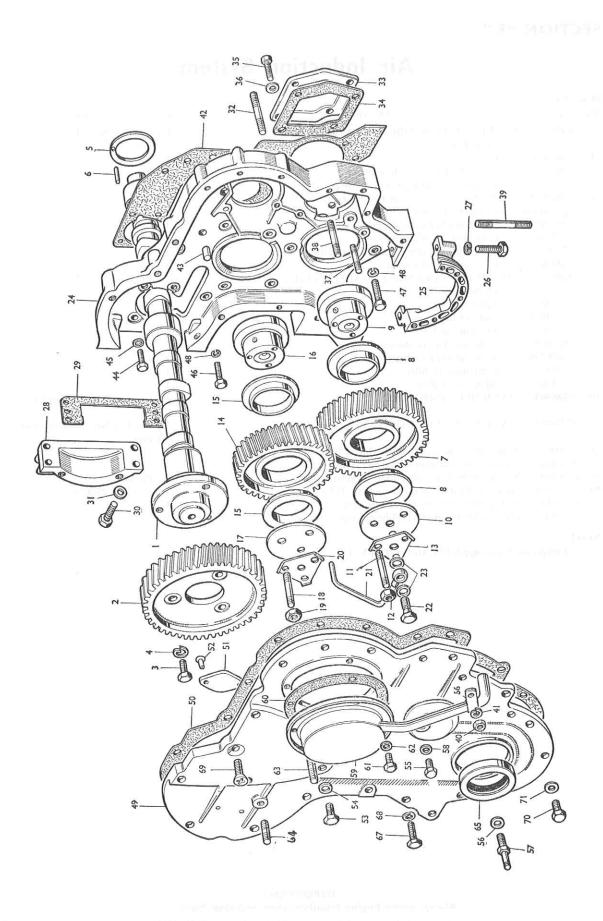

SECTION "F"

Timing Gear

	te Part									
Re	ef. No.		Description	n				Qty.	Rem	arks
1	0140034	CAMSHAFT	•••			•••		1		
2	0410231	Gear, camshaft				***	***	1		
3	0746254	Setscrew, camshaft gear to	o camshaft	•••		• • • •		3		
4	0920053	Washer, camshaft gear se			***		• • • •	3		
5	0941081	Plate, camshaft thrust		•••			•••	1		
7	0610904 41115004	Pin, camshaft thrust plate					11 2000	1		
8	0050345	GEAR, LOWER—IDLE Bush, lower idler gear	70			•••	•••	1		
9	0450035	Hub, lower idler gear			***		***	2		
10	0941091	Plate, lower idler gear ret				•••	•••	1		
11	0826475	Stud, lower idler gear pla				•••		3		
12	0576051	Nut, lower idler gear plat			···			3		
13	0921246	Tab-washer, lower idler g						1		
14	41115005	GEAR, UPPER—IDLE						1		
15	0050345	Bush, upper idler gear						2		
16	0450035	Hub, upper idler gear						1		
17	0941082	Plate, upper idler gear ret					•••	1		
18	0826434	Stud, upper idler gear pla	te and hub t	o cylinder	block			3		
19	0576051	Nut, upper idler gear plat				***		3		
20	0921246	Tab-washer, upper idler g	ear plate and	d hub reta	ining nut			1		
21	35521144	PIPE, LUB. OIL IDLEI	R GEAR SI	PRAY				1		
22	0095345	Bolt, lub. oil pipe banjo	***	•••		•••		1		
23		Washer, lub. oil pipe ban		2.22		***		2		
	0930001	Lockwire, lub. oil pipe ba		•••				1		
	57578	HOUSING, TIMING G	EAR (ASSE	MBLY)	***	***		1		
0.4	251 (15(Comprising:—	1 10000000					3.		
24	37161562	0, 0					•••	1		
25 26	37354361					•••	• • • •	1		
27	0748418 0920053	Setscrew, timing gear						2		
28	37534531	Washer, timing gear Cover, timing gear he					•••	2		
29	36853105						•••	1		
30	0748416	Setscrew, timing gear					 timina	1		
50	0710110	gear housing	17 (200)		···	over to	tilling	4		
31	0920106	Washer, timing gear				over se		4		
32	0827609	Stud, timing gear he							lso detailed o	on Section 'I'
33	37556125								rior to Eng. 1	
		FACING			***				bsolete—Use	
									5866428	V
	37556146	COVER, TIMING	GEAR HO	USING I	HYDRAU	JLIC 1	PUMP			
		FACING	•••					1 E	ng. No. 2610	381 onwards
210	36866428								sed only with	
34	36866424								sed only with	a 37556125
35	0748412	Setscrew, hydraulic	pump facing	cover to	timing	gear h	ousing	4		
36	0920106	Washer, hydraulic pu				•••		4		
37	0827613	Stud, timing gear hou					•••	2		
38	0827614	Stud, timing gear ho		cover to	housing	(Also s		0. 10.00	하고 있다면서 그렇게 하면 주요 그렇게 다 다 했다.	ulic pump gear
39	32532306	breather pipe clip)- Stud, timing gear hou		oil av	***	***		2	ocket	- Castle- (C)
40	0576002	Nut, timing gear housing	front cover :	on sump	•••	•••	***		iso detailed o	on Section 'G'
41	0920053	Washer, timing gear housing			or nut	****	***	3		
42	36814112	Joint, timing gear housing			1122		•••	1		
43	0350017	Dowel, timing gear housing			***	***		2		
44	0746355	Setscrew, timing gear hou	_				•••	-	Camshaft C	Chamber
45	0920299	Washer, timing gear hous					***	4	- Dunismure C	
								.)		


SECTION "F" Continued

Timing Gear

Plat	e Part					The second secon
Rei	. No.	Description			Qty.	Remarks
46	0746255	Setscrew, timing gear housing to cylinder block				
47	0746257	Setscrew, timing gear housing to cylinder block	2.5		1	
48	0920053	Washer, timing gear housing setscrew			11	
	57539	COVER, TIMING GEAR HOUSING—FRONT			1.8	and the state of the state of
		(ASSEMBLY) \List No's	-		1	Prior to Eng. No. 2602591
	81219	COVER, TIMING GEAR HOUSING—FRONT 187 and 1	189			CARLE GAZAGO ENERGIN
		(ASSEMBLY) J only		••	1	Eng. No. 2602591 onwards
	57594	COVER, TIMING GEAR HOUSING—FRONT			20 11	and the college
		(ASSEMBLY) List No's		•••	1	Prior to Eng. No. 2607236
	82210	COVER, TIMING GEAR HOUSING—FRONT 188 and 1	190		4	and the same and t
		(ASSEMBLY) J only	0	•••	1	Eng. No. 2607236 onwards
		Comprising:—			12	and the second second
	37167613				1	Used only with 57539
49	37167693		8		1	Used only with 81219
	37167694		8	•••	1	Used only with 57594/82210
	0748411	Plug, timing gear housing front cover	9	• • •		Used only with 82210
	0920106	Washer, timing gear housing front cover plug		• • • •	1	and the second of the second of
50	36813117			• • •	1	
51	36171114			•••	1	
52	0690061	Rivet, camshaft thrust plate retaining		•••	2	and the early shallower
53	32151113			•••	1	
54	0920109	Washer, timing gear housing front cover plug		• • •		Used only with 57539/81219
55	0748351	Plug, timing gear housing front cover		•••	1	the term of the second
56	0920101	Washer, timing gear housing front cover plug		•••	1) 111hith 81210
57	32186114			•••		Used only with 81219
58	0920101	Washer, engine timing pin		•••	1) Head only with 57504/82210
	32186112			•••		Used only with 57594/82210
12/27	0920101	Washer, engine timing pin		•••	1)
59	37556137			• • •	1	Replaces 37556127
		C/W BREATHER PIPE		•••	1	Replaces 37330127
60	33825409		d III	•••	1	
-	0740251		a	•••	1	
61	0748351	Selection, 1995 Party Selection		•••	4	
	0020101	mone cover	hlw)	•••	т	
62	0920101	, and the party of	Uly)	•••	4	
(2		screw		•••	7	
63		pump mounting plate				See Section 'H'
61	0827604	Stud, timing gear housing front cover to dynamo adjustin	o lev			Used only with
64	0827004		5 10		15	57539/81219/57594
65	2414111	Seal, timing gear housing front cover oil		•••	1	(373376121376737
03	2414111	Sear, thining gear nousing from cover on		•••	•	To timing gear housing
66	36644139	Clip, timing gear housing breather pipe			15	front cover setscrew
66 67	0748414	Setscrew, timing gear housing front cover to housing			10	9 off with 82210
07	0748415	Setscrew, timing gear housing power—take off cover—low	er ho			
	0740413	—also secures dynamo adjusting lever			1	Used only with 82210
68	0920053	Washer, timing gear housing front cover setscrew			10	
00	0748524	Setscrew, timing gear housing front cover to housing				List No's. 188 and 190 only
	0920054	Washer, timing gear housing front cover setscrew			2	
69	2227063	Screw, timing gear housing front cover to housing			1	* si mi
70	0748413	Setscrew, timing gear housing front cover to bottom cover			5	
71	2411152	Washer, timing gear housing front cover to bottom cover setscre	ew		-	

NOTES




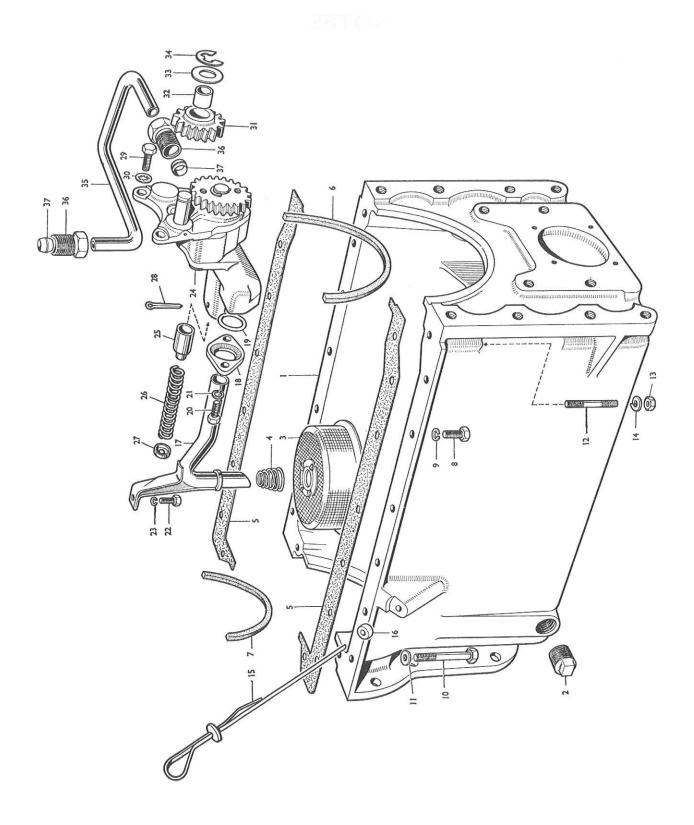

SECTION "G"

Lubricating Oil System

	te Part	D constaction				04	Domesto.
Re	f. No.	Description				Qty.	Remarks
1	37171351	SUMP, LUB. OIL		• • •	•••	1	
2	0650540	Plug, lub. oil sump drain		•••		1	
3	37725432	STRAINER, LUB. OIL				1	
4	31747109	Spring, lub. oil strainer positioning			• • •	1	
5	41424201	Joint, lub. oil sump to cylinder block—Sides		•••	***	1	pair
6	36884107	Joint, lub. oil sump—Front				1	
7	0490019	Joint, lub. oil sump—Rear			***	1	
8	0746254	Setscrew, lub. oil sump to cylinder block			***	12	
9	0920053	Washer, lub. oil sump to cylinder block setsch			• • •	12	
10	0096238	Setscrew, lub. oil sump to cylinder block—Lo		• • •		2	
11	0920108	Washer, lub. oil sump to cylinder block setsch	rew			2	Rear two setscrews
12	32532306	Stud, lub. oil sump to timing gear housing				2	Also detailed on Section 'F'
13	0576002	Nut, lub. oil sump retaining				2	
14	0920053	Washer, lub. oil sump retaining nut				2	
15	0320105	DIPSTICK, LUB. OIL SUMP				1	
16	0920336	Washer, lub. oil dipstick sealing				1	
17	35732446	PIPE, LUB. OIL SUCTION				1	
18	36174115	Flange, lub. oil suction pipe			***	1	
19	0640144	Seal, lub. oil suction pipe to flange				1	
20	0746254	Setscrew, lub. oil suction pipe flange to pump) hou	sing	1002	2	
21	0920053	Washer, lub. oil suction pipe flange setscrew			***	2	
22	0746051	Setscrew, lub. oil suction pipe clip to bearing	cap			1	
23	0920052	Washer, lub. oil suction pipe clip setscrew			ese	1	
24	41314019	PUMP, LUB. OIL (ASSEMBLY)				1	Obsolete—Use 41314042
	41314042	PUMP, LUB. OIL (ASSEMBLY)			***	1	Alternative 41314033
		Including:—					
25	0630082	Plunger, lub. oil relief valve				1	
26	0780312	Spring, lub. oil relief valve				1	
27	0150144	Cap, lub. oil relief valve spring seating			***	1	
28	0610011	Split-pin, lub. oil relief valve spring retain	ning			1	
29	0746254	Setscrew, lub. oil pump to main bearing cap			•••	3	
30	0920299	Washer, lub. oil pump to main bearing cap				3	
31	0994967	GEAR, LUB. OIL PUMP IDLER C/W B	USH		***	1	
		Including:—					
32	0050344	Bush, lub. oil pump idler gear				1	
33	0921241	Washer, lub. oil pump idler gear			***	1	
34	0180831	Clip, lub. oil. pump idler gear retaining				1	
35	34715124	PIPE, LUB. OIL DELIVERY TO CYLIN				1	
36	33532121	Nut, lub. oil pump delivery pipe to cylinder				The second second	
37	0560244	Olive, lub. oil pump delivery pipe to cylinder	r bloc	k and lu	b. oil pu	ımp 2	

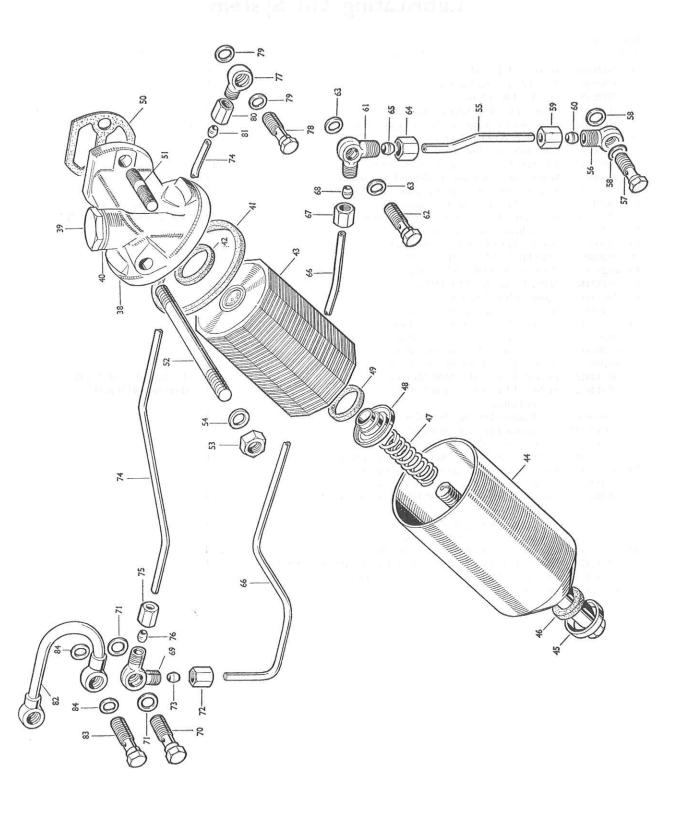

SECTION "G" Continued

Lubricating Oil System


Plate	Part	
		Description Qty. Remarks
		FILTER, LUB. OIL (ASSEMBLY) 1
	34391	Comprising:—
38	32598	COVER, LUB. OIL FILTER (ASSEMBLY) 1
39	0650690	Plug, lub. oil filter relief valve 1
40	0490595	Joint-washer, lub. oil filter relief valve plug 1
40	0780243	Spring, lub. oil filter relief valve Included in 1
	0020011	Ball, lub. oil filter relief valve 32598 1
41	0490520	Joint, lub. oil filter cover to container 1
41	0470622	Insert, lub. oil filter element top seal seat 1
42	0730103	Seal, lub. oil filter element top 1
43	35289	Element, lub. oil filter 1
43	32528	CONTAINER, LUB. OIL FILTER (ASSEMBLY) 1
44	0840052	Container, lub. oil filter—Bare 1
45	32529	Bolt, lub. oil filter 1
46	0921061	Washer, lub. oil filter bolt sealing Comprise 1
47	26540022	Spring, lub. oil filter element pressure \ 32528 1
48	0730104	Retainer, lub. oil filter element pressure 1
49	0730104	Seal, lub. oil filter element lower 1
50	0490514	Joint lub oil filter to cylinder block 1
51	0826425	Stud lub oil filter to cylinder block 1 \ Obsolete—Use 0/46434/
52	0826476	Stud lub oil filter to cylinder block—Long 1 \ 0096446
53	0576051	Nut, lub. oil filter retaining 2 Used only with 0826425/0826476
55	0746454	Setscrew, lub. oil filter to cylinder block 1
	0096446	Setscrew, lub. oil filter to cylinder block—Long 1
54	0920054	Washer, lub. oil filter setscrew 2
55	0623402	PIPE, LUB. OIL—PRESSURE RAIL TO UPPER IDLER GEAR
33	0025402	FEED 1
56	0201399	Banjo, lub, oil pipe 1
57	0095350	Bolt, lub. oil pipe banjo 1
58	0920126	Washer, lub. oil pipe banjo bolt To Pressure Rail 2
59	0576112	Nut, lub, oil pipe 1
60	0566003	Olive, lub. oil pipe 1
61	0201397	Banjo, lub. oil pipe 1
62	0095350	Bolt, lub. oil pipe banjo 1
63	0920126	Washer, lub. oil pipe banjo bolt To Idler Gear Feed 2
64	0576112	Nut, lub, oil pipe 1
65	0566003	Olive lub oil pipe 1
66	34421408	PIPE, LUB. OIL—UPPER IDLER GEAR FEED TO CAMSHAFT
00	5.121100	CHAMBER 1
67	0576111	Nut, lub, oil pipe To Idler Gear 1
68	0566002	Olive, lub. oil pipe Feed 1
69	0201467	Connection, lub. oil pipe 1
70	0095350	Bolt, lub, oil pipe connection 1
71	0920126	Washer, lub, oil pipe connection bolt \To Camshaft Chamber 2
72	0576111	Nut, lub, oil pipe 1
73	0566002	Olive, lub. oil pipe 1

SECTION "G" Continued

Lubricating Oil System

	ite Part				
R	ef. No.	Description		Qty.	Remarks
74	34417116	PIPE, LUB. OIL—CAMSHAFT CHAMBER TO NO	. 1 CAMSHA	FT	
		BEARING	***	1	
75	0576111	Nut, lub. oil pipe \ To Camshaft Chamber		1	
76	0566002	Olive, lub. oil pipe \(\) Connection		1	
77	0201398	Connection, lub. oil pipe		1	
78	0095350	Bolt, lub. oil pipe banjo	•••	1	
79	0920126	Washer, lub. oil pipe banjo bolt >To No. 1 Cam	shaft Bearing	2	
80	0576111	Nut, lub. oil pipe		1	
81	0566002	Olive, lub. oil pipe	•••	1	
	0990572	PIPE, LUB. OIL—CAMSHAFT CHAMBER TO C	CYLINDER		
		HEAD		1	Prior to Eng. No. 2601109
				1	Obsolete-Use 35551503
82	35551503	PIPE, LUB. OIL—CAMSHAFT CHAMBER TO C	CYLINDER	,	
		HEAD		1	Eng. No. 2601109 onwards
83	0095350	Bolt, lub. oil pipe		2	
84	0920126	Washer, lub. oil pipe bolt	·	4	
		PIPE, LUB. OIL—IDLER GEAR SPRAY	***		See Section 'F'

NOTES

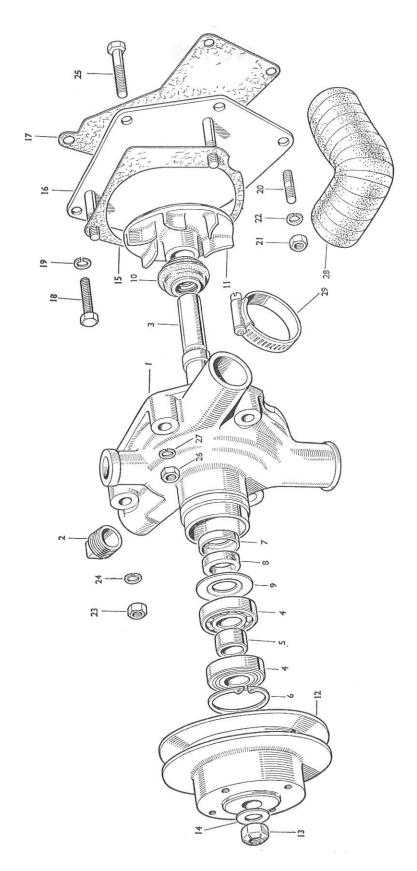


propries

SECTION "H"

Water Pump (List Nos. 187 & 189 Only)


Plate	e Part		6					04	Remarks
Ref	. No.	De	escription					Qty.	
	41312038	WATER PUMP (ASSEMBL	.Y)	•••					Prior to Eng. No. 2600393 Obsolete—Use 41312064
	41312064	WATER PUMP (ASSEMBL	Y)	***				1	Eng. No. 2600393 onwards
		Comprising:—							
1	37711291	Body, water pump		***				1	
2	0650540	Plug, water pump body	,,					1	
-	0750368	Shaft, water pump drive	***					1	Used only with 41312038
3	32753412					300	***	1	Used only with 41312064
4	0040057*	Bearing, water pump	***				,	2	
5	0330927*	Distance-piece, water pur	np bearing	g				1	
6	0170046*	Circlip, water pump bear	ing location	ng				1	
7	0380098*	Housing, water pump be			***	***		1	
8	0730046*	Seal, water pump bearing	g					1	
9	0380164*	Plate, water pump bearing				***		1	
10	2415207*							1	Alternative 2415208
11	37447511				***			1	
	31146701	Pulley, water pump	· · · ·		Ş.,			1	Used only with 41312038
12	31146702							1	Used only with 41312064
13	0576103	Nut, water pump pulley	retaining		***	***		1	
14	0920007	Washer, water pump pul		ng nut				1	
15	36866415	Joint, water pump body to m	ounting p	late				1	
16	38611108	PLATE, WATER PUMP M	IOUNTIN	IG C/W	STUDS	A		1	
17	36865104	Joint, water pump mounting	plate to t	iming ge	ar housin	ng front c	over	1	
18	0748525	Setscrew, water pump moun	ting plate	and timi	ing gear	housing f	ront		
	*** **** - -	cover to timing gear housing	ıg		***			2	
19	0920054	Washer, water pump mount	ing plate	and timi	ng gear	housing f	ront		
		cover setscrew		***				2	
20	0827812	Stud, water pump mounting	plate to t	iming ge	ar housin	ng front c	over	2	Obsolete—Use 0748521/0920109
20	0748521	Setscrew, water pump mour	ting plate	e to timi	ng gear	housing f	ront		
		cover							
	0920109	Washer, water pump mounting	ng plate se	etscrew		l.,		2	Used only with 0920109
21	0576051	Nut, water pump mounting p	late retair	ning					Used only with 0827812
22	0920054	Washer, water pump mounting	ng plate re	etaining n	iut			2 /	
23	0576051	Nut, water pump body retain				***		3	
24	0920054	Washer, water pump body re	taining nu	ıt				3	
25	0096435	Bolt, water pump body to me	ounting pl	ate	***			1	
26	0576051	Nut, water pump body retain	ing					1	
27	0920054	Washer, water pump body re	taining nu	ıt	***	100		. 1	
28	34821416	Hose, water pump outlet to c	ylinder bl	ock wate	r inlet co	nnection		. 1	
29	0180067	Clip, water connection hose						. 2	
		HOSE, WATER PUMP BO	DY TO	BY-PAS	S CONN	ECTION			See Section 'B'
		BELT, WATER PUMP AN	ID DYNA	AMO DI	RIVE	***			See Section 'J'
	58740	WATER PUMP REPAIR	KIT, WIT	гн веа	RINGS	(INCLU	DES	5	
		ITEMS MARKED *)		***	***	***		. 1	
	58739	WATER PUMP REPAIR	KIT, LES	S BEAR	INGS			. 1	

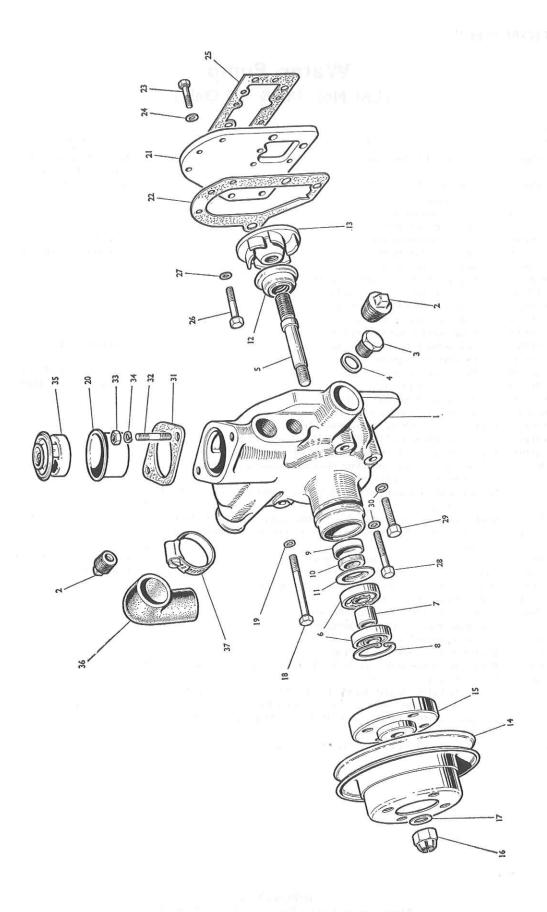

SECTION "H" Continued

Water Pump (List Nos, 188 & 190 Only)

	e Part	75						Out The sale
Re	f. No.	Des	cription					Qty. Remarks
	59930	WATER PUMP (ASSEMBLY Comprising:—	()	•••			•••	1
1	37712281			.,.	,		***	1
2	0650540	Plug, water pump body	***	***		,	844	2
3	0650203	Plug, water pump body			19.3			ī
4	2411157	Washer, water pump body		•••		,	***	i
7	2411137	waster, water pump body	Pres	***		•••		Prior to Eng. No. 2600393
	32753409	Shaft, water pump drive			•••			1 Obsolete—Use 32753411/ 33426508
5	32753411	* Shaft, water pump drive		***		***		1 Eng. No. 2600393 onwards
6	0040057*	Bearing, water pump	***	***	***		***	2
7	0330875*	Distance-piece, water pum	p bearing		***	***		1
8	0170046*	Circlip, water pump bearing	g locatin	g	***	***		1
9	0380098*	Housing, water pump bear	ing front	seal			***	1
10	0730046*	Seal, water pump bearing-	-Front		***	***	***	1
11	0380164*	:		seal retain	ning		***	1
12	32274	Seal, water pump impeller-	-Rear	***	***	***	•••	1 Obsolete—Use 2415207
	2415207*				***			1 Alternative 2415208
13	0460035*			***	***		***	1
14	31146402					• • •	•••	1 Obsolete-Use 31146911
15	33426508			***	***		***	1 Used only with 32753411
	31146911			***	***			1
	33426507			***	***	***	***	1 Used only with 32753409
16	0576103	Nut, water pump pulley re	taining		•••		•••	1 Alternative 0574210
17	0920007	Washer, water pump pulle		g nut	***		•••	4
18	32155117							1
19	0920155	Washer, water pump body			***			1
20	0900043	Sleeve, water pump				•••	• • •	1
	36236706	Plate, water pump mounting					4.0	1
22	36866711	Joint, water pump body to mou	inting pla	ite	***	***	***	1
23	0746052	Setscrew, mounting plate to wa				44.4		3
	0920103	Washer, mounting plate setscre			***	***		3
	0490024	Joint, water pump mounting pl		inder hea	d		,	1
	0746052	Setscrew, water pump mounting				• • • •		5 Replace 0746152
27	0920052	Washer, water pump mounting	plate sets	screw				5
	0096441	Setscrew, water pump body to			ng		***	1
	0096439	Setscrew, water pump body to						1
	0920155	Washer, water pump body setso				***		2
5.5		CONNECTION, WATER PU	MP OU	TLET				Quote Engine Number
31	0490184	Joint, water pump outlet conne				***		1
32	0826419	Stud, water pump body to outle		tion				·2
	0576051	Nut, water pump outlet connec					•••	2
	0920054	Washer, water pump outlet con						2
	32550	Thermostat			***	•••		1
	34824404	Hose, water pump outlet to cyl	nder blo	ck water	inlet cor	nection	1	1
	0180067	Clip, water connection hose						2
- 1	- 100001	BELT, WATER PUMP AND					***	See Section 'J'
6	59307	WATER PUMP REPAIR KI	T WITH	I BEAR	INGS I			
1	58307	ITEMS MARKED *						37
	58308	WATER PUMP REPAIR KI	T LESS	BEARII	NGS	***	***	1

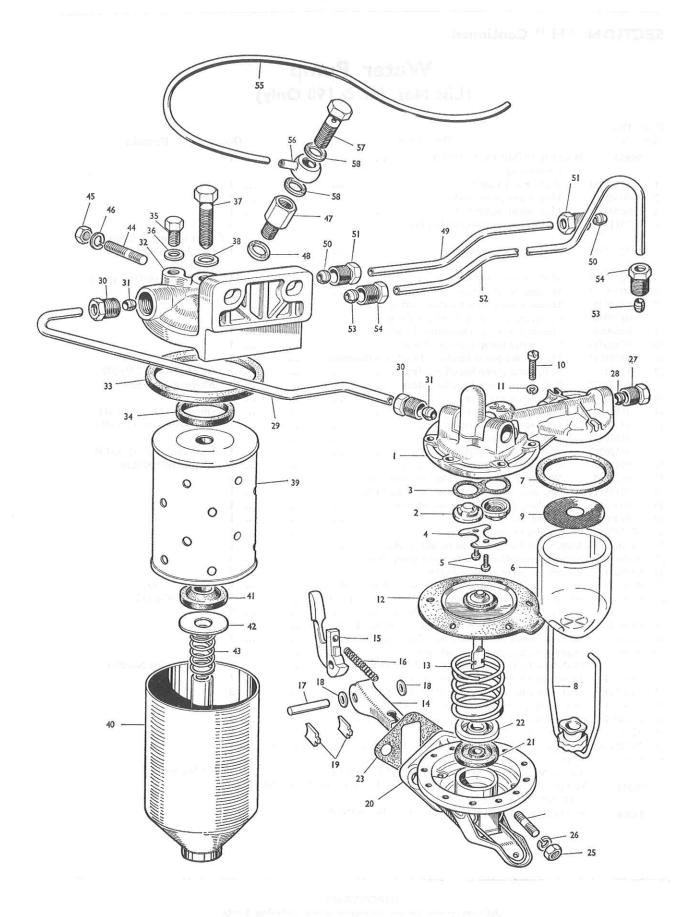

SECTION "I"

Fuel Oil Injection Equipment

Plate	e Part				
Ref	. No.	Description		Qty.	Remarks
				ſ	Prior to Eng. No. 2609350
	32589	LIFT PUMP, FUEL OIL (ASSEMBLY)	1.000		Obsolete —Use 2641345/0826251
	2641345	LIFT PUMP, FUEL OIL (ASSEMBLY)		1	Eng. No. 2609350 onwards
		Comprising:—			
	32597	HOUSING, LIFT PUMP INLET & OUTLET	VALVE		
		(ASSEMBLY)	garage Taylor	. 1	
1	0240731	Housing, lift pump inlet and outlet valve]	. 1	
2	32517	Valve, lift pump inlet and outlet	000 111 20	. 2	
3	0490559	Joint, lift pump inlet and outlet to housing			
4	0910058	Plate, lift pump inlet and outlet valve retaining	manufacture.		
5	0720708	Screw, lift pump valve retaining plate to housing	Comprise		
6	0995260	Bowl, lift pump inlet filter sediment—Glass	32597		
7	0490538	Joint, sediment bowl to lift pump valve housing	(f) (f) f = = 1.	. 1	
8	30428	Stirrup, sediment bowl to lift pump valve housing	The section of the	4	
		retaining physical			
9	0800044	Filter-screen, lift pump inlet gauze			
10	0720709	Screw, lift pump inlet and outlet valve to body	the of some		
11	0921018	Washer, lift pump inlet and outlet valve housing			Bull the Hotel Bull to the Manual Co. II.
12	2641491	Diaphragm, lift pump	***		Replaces 32518
13	0780224	Spring, lift pump diaphragm return			11 1 1 21 22500
14	0520368				Used only with 32589
	0520580	Lever, lift pump diaphragm operating			Used only with 2641345
15	0520528	Rocker arm, lift pump actuating			
16	0780225	Spring, lift pump actuating rocker arm return		. 1	
17	0610847	Pin, lift pump actuating rocker arm and diapl	nragm operating	3 1	
4.0	0001010	lever			
18	0921019	Washer, lift pump actuating rocker arm and diap			
10	26410006	lever Retainer, lift pump actuating rocker arm and diap			
19	26410006	lever pin		-	
20	32573	Body, lift pump c/w priming lever and spring			Used only with 32589
20	26410047				Used only with 2641345
21	0730128	Oil seal, lift pump body			1
22	0997129	Retainer, lift pump body oil seal	300		
23	36862126	Joint, fuel oil lift pump to cylinder block			Replace 0490547
24	0826251	Stud, fuel oil lift pump to cylinder block	***	•	Replace 0826222
25	33221115	Nut, fuel oil lift pump retaining		•	Replace 0576102
26	0920053	Washer, fuel oil lift pump retaining nut	***	. 2	ALITHUR AND A STREET
27	33533112	Nut, fuel oil pipe \ To Lift Pump	11 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1	
28	0566003	Olive, fuel oil pipe Inlet Port	***	1	
20	34522125	PIPE, FUEL OIL—LIFT PUMP TO FILTER			Prior to Eng. No. 2601108
29	35355821	PIPE, FUEL OIL—LIFT PUMP TO FILTER	V 200	. 1	Eng. No. 2601108 onwards
4)	0571346	Nut, fuel oil pipe \ To Lift Pump		. 1)	
	0566004	Olive, fuel oil pipe \(\)	***	4	
	0201500	Banjo, fuel oil pipe		1	
	0095031	Bolt, fuel oil pipe banjo			Used only with 34522125
	0920154	Washer, fuel oil pipe banjo bolt To Filter	2 22.00 VI II to	2	The Control of the Co
	0576113	Nut, fuel oil pipe		. 1	
	0566004	Olive, fuel oil pipe		. 1	
30	33533112	Nut, fuel oil pipe	1	. 2	Used only with 35355821
31	0566003	Olive, fuel oil pipe	200 - U 0	. 25	
10070		2000			


SECTION "I" Continued

Fuel Oil Injection Equipment


	te Part				ngt in
Re	ef. No.	Description		Qty.	Remarks
	*35532	FILTER, FUEL OIL (ASSEMBLY) (TYPE F4B/2)	***	1	Prior to Eng. No. 2601108
	2656653	FILTER, FUEL OIL (ASSEMBLY) (TYPE 7961090) Comprising:—	•••	1	Eng. No. 2601108 onwards
	26560006	COVER FILE OH FILTER (ACCEMBLY)		1	
32	26560007	0 0 1 11 01: 1	•••	1	
33	0490520	T ' (C 1 ') CI	•••	1	
34	26560003	G 1 C 1 -11 Ch 1		1	
35	0650702	Pl 6 1 3 Cl		1	
36	0921080	Y 1 C 1 1 C 1 1 C 1 1 C 1 1 C 1 C 1 C 1		1	
37	0095292	Bolt, fuel oil filter cover plug 2656000		1	
38	0921079	Washer, fuel oil filter cover to container bolt		1	
39	32543	ELEMENT, FUEL OIL FILTER		1	
40	26560008	CONTAINER, FUEL OIL FILTER ELEMENT (ASSEM		1	
41	26560010	Joint, fuel oil filter element pressure spring		1	
42	265600010	Washer, fuel oil filter element pressure spring Included		1	
43	26560004	그렇게 어떻게 하나 이렇게 하면 가장 하는 맛을 살게 있어야 하는 것을 하나 아이들이 아이들이 아이들이 아이들이 아이들이 아이들이 아이들이 아이들		1	
43	0826443	0/ 1 0 1 2101/ / 12 1 11 1		3	Used only with 35532
44	0826409	Gr. 1 C 1 - 11 Ch - 4 - 11 - 1 - 1	11	2	Used only with 2656653
45	0576051	N. A. C. I H. China and J. Line		-	3 off each used with
46	0920054			-	0826443
47	33423	NT 1 C 1 11 CH C	•••	,	Eng. No. 2601108 onwards
48	0920146	See the second s	•••	1	Ling. 140. 2001100 Onwards
40	0623754	Washer, non-return valve PIPE, FUEL OIL—FILTER TO FUEL PUMP \(\) List No's. 18	 7 and	,	Prior to Eng. No. 2601108
49	35351412	PIPE, FUEL OIL—FILTER TO FUEL PUMP 188 only	/ and		Eng. No. 2601108 onwards
47	35353177	PIPE, FUEL OIL—FILTER TO FUEL PUMP List No's. 18		1	Prior to Eng. No. 2603732
	35353207	PIPE, FUEL OIL—FILTER TO FUEL PUMP 190 only	, and	1	Eng. No. 2603732 onwards
	33555319	Union, fuel oil pipe		1)	Eng. 140. 2003/32 onwards
	0920154	Washing first all also sucked	•••		Used only with 0623754
	0576113	37 . 6 . 1 . 1	***	1	Osca omy with 0023734
	0566004	0" 6 1 " !		1	
50	0566003	01: 6-1-11-1-			Used only with 35351412/
51	33533112		1		35353177/35353207
31	0623723	PIPE, FUEL OIL—FUEL PUMP TO FILTER	•••	2)	33333117/33333201
	0023723	RETURN >List No's. 18	7 and	1	Prior to Eng. No. 2601108
52	35355805	PIPE, FUEL OIL—FUEL PUMP TO FILTER 188 only	, and		Ther to Eng. 1to. 2001100
Ja	55555605	RETURN		1	Eng. No. 2601108 onwards
	35355807	PIPE, FUEL OIL—FUEL PUMP TO FILTER			Ling. 110. 2001100 onwards
	00000007	RETURN >List No's. 18	9 and	1	Prior to Eng. No. 2603732
	35355837	PIPE, FUEL OIL—FUEL PUMP TO FILTER 190 only	, una	•	Ther to Eng. 110. 2007.02
	55555657	DETUDN		1	Eng. No. 2603732 onwards
	33555319	Union, fuel oil pipe		1)	Eng. 110. 2000 / 52 off wards
	0920154	Washer, fuel oil pipe union >To		72.1	Used only with 0623723
	0576113	Nut fuel oil pine		1	
	0566004	Olive, fuel oil pipe		1	
53	0566003	Olive feel all ains		2	Used only with 35355805/
54	33533112	Nut, fuel oil pipe			35355807/35355837
55		PIPE, FILTER OVERFLOW CONNECTION TO NO. 4	• • • • • • • • • • • • • • • • • • • •	~)	
00	- UMD / / U	ATOMISED LEAV OFF DANIO		1	
	0999253	Connection fuel ail Filter leak off house			Prior to Eng. No. 2601108
56		Connection fuel ail Filter leak off basis			Eng. No. 2601108 onwards
57		Bolt, fuel oil—Filter leak-off banjo		1	
58	0920146	Washer, fuel oil—Filter leak-off banjo bolt		2	
	TE:—	The same of only out		-	
	*0	A Destruction P. LL. Marrie C. A. V. T. (1			

IMPORTANT
Always quote Engine Number when ordering Parts

*Component Parts supplied by Messrs. C.A.V. Ltd.

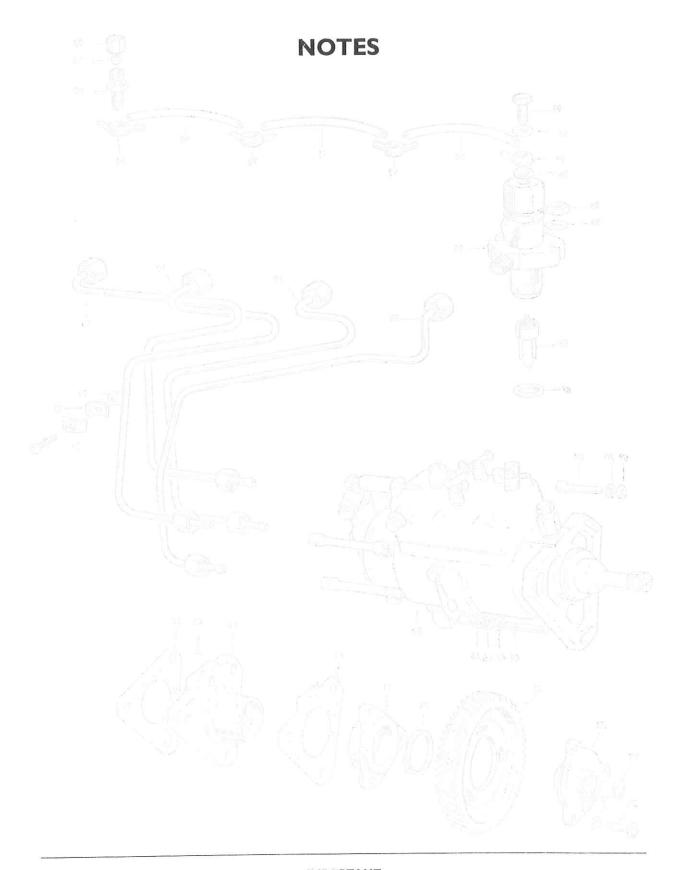

IMPORTANT
Always quote Engine Number when ordering Parts
FIT ONLY GENUINE PERKINS PARTS

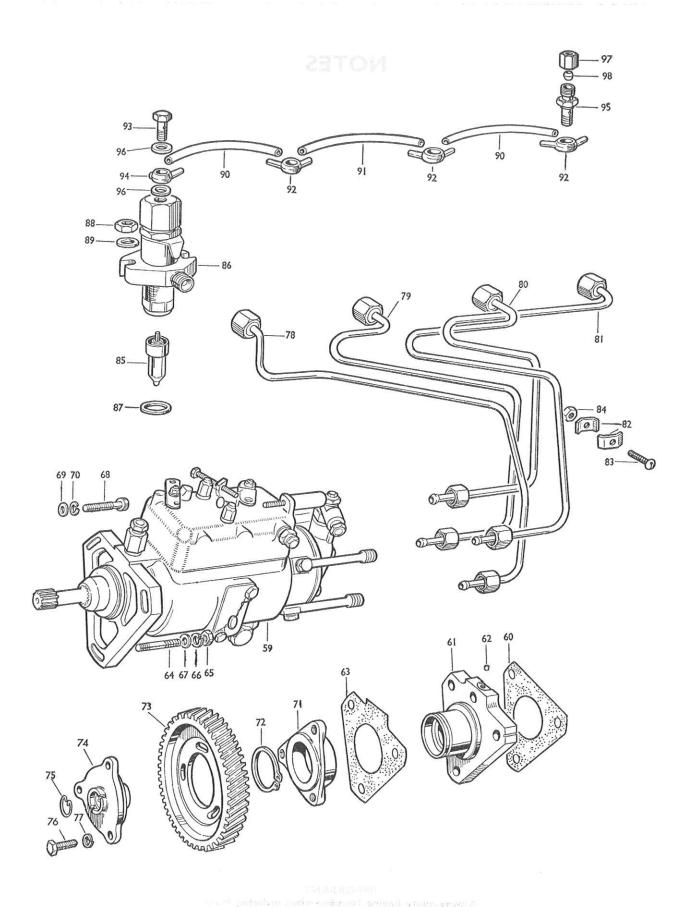

SECTION "I" Continued

Fuel Oil Injection Equipment

	e Part f. No.	Description Description		Qty. Remarks
		PUMP, FUEL INJECTION (ASSEMBLY) C/W THROTTLE AM		List No's. 187 and 188 only
59	*36394	STOP CONTROL LEVERS (TYPE 3243021A)		1) (Replaces 36020/36319)
	*36030	PUMP, FUEL INJECTION (ASSEMBLY) C/W]		Prior to Eng. No. 2603732
	-30030	THROTTLE AND STOP CONTROL LEVERS		Obsolete—Use 36143
		(TYPE 3246375) List No's.		1 See Note**
	*36143	PUMP, FUEL INJECTION (ASSEMBLY) C/W 189and 190		2 Eng. No. 2602722 to 2611736
	30143	THROTTLE AND STOP CONTROL LEVERS only		}
		(TYPE 3246376)		1 Obsolete—Use 36463
	0650756	Plug, fuel pump		1]
3	*36463	PUMP, FUEL INJECTION (ASSEMBLY) C/W THROTTLE AT	ND	realite the sector
		STOP CONTROL LEVERS (TYPE 3246817)		1 Engine No. 2611737 onwards
60	0490685	Joint, fuel pump to carrier		1 production of the contraction
61	0450036	Carrier, fuel pump and drive gear		L burgan and the
62	0650599	Plug, fuel pump and drive gear carrier	•••	
63	0490706	Joint, fuel pump and drive gear carrier to timing gear housing		1
64	0827609	Stud, fuel pump and drive gear carrier to timing gear housing		
65	0576002	Nut, fuel pump and drive gear carrier retaining		
66	0920053	Washer, fuel pump and drive gear carrier retaining nut		
67	0920003	Washer, fuel pump and drive gear carrier retaining nut	•••	1 Townset halo
68	0720844	Capscrew, fuel pump and drive gear carrier to timing gear housing	•••	
69	0920003	Washer, fuel pump and drive gear carrier capscrew—Plain	•••	THE PERSON OF THE PROPERTY OF
70	0920053	Washer, fuel pump and drive gear carrier capscrew—Spring	•••	1
71	0450034	HUB, FUEL PUMP DRIVE GEAR	***	
72	0170044	Circlip, fuel pump drive gear hub retaining	•••	1
73	0410232	Gear, fuel pump		1 Obsolete Use 37427443
74	0940868	Adaptor, fuel pump gear		10. I alkala di sancia single a constanti di sancia
	37427443	Adaptor, fuel pump gear	111	income for the manufactor of the PSP-DC P
75	0170129	Circlip, fuel pump gear adaptor Setscrew, fuel pump gear and adaptor to drive gear hub		and the second s
76	0746256	Washer, fuel pump gear and adaptor to drive gear hub Washer, fuel pump gear and adaptor setscrew		2
77	0920053	PIPES, FUEL INJECTION (ASSEMBLY)		. 1 List No's. 187 and 188 only
	57494	Comprising:—	- 7	Talifa spiritti orani alia alia alia alia alia alia alia a
70	35355183	1 2 31 10 1 1		and delict make to a control of the state of
7 8 7 9	35355184			
80	35355185			e at the result has a present in uncolourery
81	35355186			Part 1 110. It also included the
01	57569	PIPES, FUEL INJECTION (ASSEMBLY)		. 1 List No's. 189 and 190 only—
	27003	Comprising:—		Prior to Eng. No. 2603732
	35355181	Pipe, fuel injection c/w nuts and olives No. 1 Cylinder		. 1
	35355179	Pipe, fuel injection c/w nuts and olives No. 2 Cylinder		. 1
	35355182	Pipe, fuel injection c/w nuts and olives No. 3 Cylinder		. 1
	35353159			. 1
	81669	PIPES, FUEL INJECTION (ASSEMBLY)		. 1 List No's. 189 and 190 only.
		Comprising:—		Eng. No. 2603732 onwards
	35355237	Pipe, fuel injection c/w nuts and olives No. 1 Cylinder		
	35355238	Pipe, fuel injection c/w nuts and olives No. 2 Cylinder		
	35355239	Pipe, fuel injection c/w nuts and olives No. 3 Cylinder	• • • •	
	35355241	Pipe, fuel injection c/w nuts and olives No. 4 Cylinder	•••	
82	0180637	Clip, fuel injection pipe clamping	• • •	2 (T :- Note 107 and 100 only
83	0726264	Bolt, fuel injection pipe clip clamping	•••	
84	0571350	Nut, fuel injection pipe clip clamping bolt	•••	. 3)

SECTION "I" Continued


Fuel Oil Injection Equipment

	ite Part						
R	ef. No.	Description				Qty.	. Remarks
	0180574	Clip, fuel injection pipes clamping (Clips 2, 3, together)	and 4 ir	njection	pipes	2	ELECTIVE PER PARTY
	0180637	Clip, fuel injection pipes clamping (Clips 1 a together)	and 2 in	jection		2	List No's. 189 and 190 only
	0726264	Bolt, fuel injection pipe clip clamping	1.4.1110	1997	- 1 111	3	Only The second
	0571350	Nut, fuel injection pipe clip clamping bolt		2000		3	THE STATE OF THE S
	2646144	ATOMISER, FUEL OIL INJECTION (ASSE				2)	Mark British Mark Const.
		(DESPATCH NO. 5307201) Comprising:—			•••	4	List No's. 187 and 188 only
85	*31990	Nozzle, fuel injection atomiser				4	
86	*2646442	Holder, fuel injection atomiser	***		1 1 1 1 1	4	
87	0920113	Washer, fuel injection atomiser		***		4	
	0999603	ATOMISER, FUEL OIL INJECTION (ASSE		555	•		
		(DESPATCH NO. 5307001) Comprising:—				4	List No's. 189 and 190 only
	*35504	Nozzle, fuel injection atomiser				4	
	*33497	Holder, fuel injection atomiser	ng Yan		•••	4	
	0920113	Washer, fuel injection atomiser	niika =	ari i a zi		1	
		Stud, fuel injection atomiser to cylinder head	al Tauri			7	See Section 'A'
88	0576051	Nut, fuel injection atomiser retaining	, "Типп и	177	***	8	See Section A
89	0920004	Washer, fuel injection atomiser retaining nut		••••	•••	0	
90	0623769	PIPE, FUEL INJECTION ATOMISER LEAK	OFF	•••	***	2 (CErom No. 1 to No. 2 . 1 N
	0020707	THE, TOLE INJECTION ATOMISER LEAR	c-OFT	•••	•••	-27	From No. 1 to No. 2 and No.
91	0623777	PIPE, FUEL INJECTION ATOMISER LEAK	C-OFF	11.31.7 17.0		1	3 to No. 4 Atomisers From No. 2 to No. 3 Atomisers
92	0201520	Connection, fuel injection atomiser leak-off pipe				3	
93	0095315	Bolt, leak-off pipe connection to atomiser		•••		3	
94	0201521	Connection, fuel injection atomiser leak-off pipe	***			1	For No. 1 Atomiser
95	0201526	Bolt, leak-off pipe banjo connection to atomiser				i {	Fitted in No. 4 Atomiser holder
96	0920107	Washer, leak-off pipe banjo connection bolt	***			8	Replace 2411152
97	0576111	Nut, leak-off pipe connection	***	***	1225	0	For return pipe
98	0566002	Olive, leak-off pipe connection	***	***		1 (F-1
NO	TE:-	THE THE TELESCOPE				-)	


^{*}Component Parts supplied by Messrs. C.A.V. Ltd.

^{**}Fuel Injection Pump 36143 replaces 36030 for Engines prior to Eng. No. 2603732 on List No's. 189 and 190 providing Pipes 81669/35353207/35355837 are also fitted.

NOTES

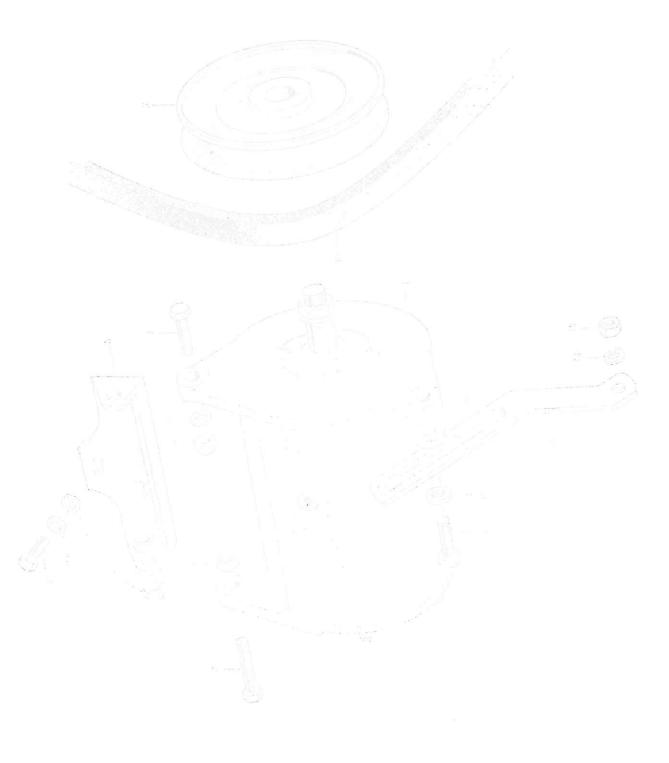

MOTES

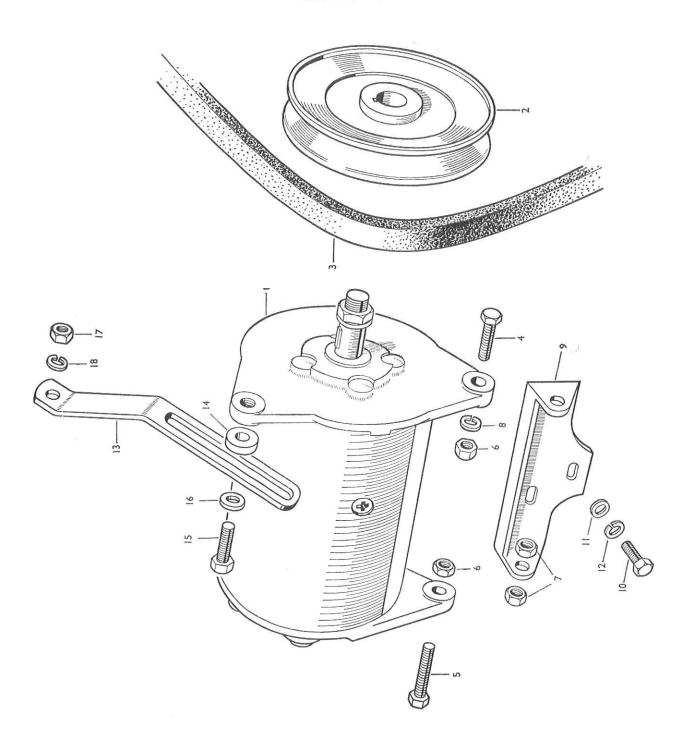

SECTION "J"

Electrical Equipment (List Nos. 187 & 189 Only)

	te Part f. No.	Description	Qty.	Remarks
1	2871170	DYNAMO C/W NUT AND KEY (TYPE C39P2—DESPATCH NO. 22259E) DYNAMO C/W NUT AND KEY (TYPE C40A—DESPATCH	1	Prior to Eng. No. 2607236— Serviced directly by Messrs. J. Lucas Ltd.
	20/11/0	NO. 22703)	1	Eng. No. 2607236 onwards
2	31141408	Pulley, dynamo drive	1	
3	2612421	Belt, dynamo and water pump drive	1	
4	0746357	Bolt, dynamo to support bracket—Front	1	
5	0746259	Bolt, dynamo to support bracket—Rear	1	Prior to Eng. No. 2607236
	0746260	Bolt, dynamo to support bracket—Rear	1	Eng. No. 2607236 onwards
6	0576002	Nut, dynamo retaining	2	
7	0576151	Locknut, dynamo and support bracket securing	2	seekkyy? Washer dynamic
8	0920053	Washer, dynamo retaining nut—Spring	2	1 off prior to Eng. No. 2607236
	0920497	Washer, dynamo retaining nut-Plain	3	2 off prior to Eng. No. 2607236
9	38164423	BRACKET, DYNAMO SUPPORT	., 1	
10	0748414	Setscrew, dynamo support bracket to timing gear housing	2	
11	0920003	Washer, dynamo support bracket setscrew-Plain	2	
12	0920053	Washer, dynamo support bracket setscrew—Spring	2	SPECIAL WILLIAM CONTROL
13	36542318	LEVER, DYNAMO ADJUSTING	1	Prior to Eng. No. 2607236
	36545117	LEVER, DYNAMO ADJUSTING	1	Eng. No. 2607236 onwards
14	33134418	Distance-piece, dynamo adjusting lever to dynamo	1	
15	0745045	Setscrew, dynamo adjusting lever to dynamo	1	
16	0920497	Washer, dynamo adjusting lever setscrew	1	Replaces 0920003
		Stud, dynamo adjusting lever to timing gear housing front cover .	March	See Section 'F'
17	0576002	Nut, dynamo adjusting lever retaining	1	
18	0920053	Washer, dynamo adjusting lever retaining nut—Spring	1	

SECTION "J" Continued

Electrical Equipment (List Nos. 188 & 190 Only)

PRIOR TO ENGINE NUMBER 2607236

Plate Part	Opp. Remail				-		
Ref. No.	Description Description				Qty	. Remarks	S
	DYNAMO C/W NUT AND KEY	(TYPE C39)	P2 DESP	ATCH N	Э.	Serviced directly b	
	22259E)	1. 7600 19			1	Messrs. J. Lucas I	.td.
31141408	Pulley, dynamo	***	***	***	1	Talk Till 1975.	
0070111	Belt, dynamo and water pump drive				1	Replaces 0070112	
0746357	Bolt, dynamo to support bracket—Fr			rus dam.	1		
0746259	Bolt, dynamo to support bracket—Re	ear	Jinos I =	-12/32/10/10	1	Helt dynamics of Holf dynamics	
0576002	Nut, dynamo retaining				2		
0576151	Locknut, dynamo and support bracket		18321	•••	2		
0920053	Washer, dynamo retaining nut-Sprin			•••	1		
0920497	Washer, dynamo retaining nut-Plair		1008 1008.01	un stoden	1		
38164424	BRACKET, DYNAMO SUPPORT				1	Washer, dynamic	
0746254	Setscrew, dynamo support bracket to				1		
0748413	Setscrew, dynamo support bracket to			OFFILE OF	2		
0920003	Washer, dynamo support bracket sets						
0920053	Washer, dynamo support bracket sets	screw—Sprin	ng	in market		Washer, dynamo	
36541418	LEVER, DYNAMO ADJUSTING	Smade	101		1	Prior to Eng. No. Obsolete—Use 365	
36541426	LEVER, DYNAMO ADJUSTING				. 01/	Eng. No. 2601069	
0745045	Setscrew, dynamo adjusting lever to o	lynamo	of invol	andrenia.	1001	Distance pieces	B114216
0920497	Washer, dynamo adjusting lever setsc		ниаућ ви	1970 (PRII)	2		
0720471	Stud, dynamo adjusting lever to timir			55555	rintra	See Section 'F'	
0576002	Nut, dynamo adjusting lever retaining		ing front	00101	014	In amonda hus?	
0920053	Washer, dynamo adjusting lever retain	ning nut—Si	pring	interior freque	. 1		
0720033	Trainer, dynamic adjusting rever remain	ini Spenny	(ggrift) aufa	a description			
	LIST No's.						
	ENGINE NU				`		
†2871170	DYNAMO C/W NUT AND KEY (-		
	22703)	•••	•••		1		
31141417	Pulley, dynamo	***	***				
0070113	Belt, dynamo and water pump drive		•••		1		
0746257	Bolt, dynamo to support bracket	2.23	•••				
0576002	Nut, dynamo retaining	•••	• • •		_		
0920053	Washer, dynamo retaining nut—Sprir		•••				
0920497	Washer, dynamo retaining nut—Plain		***				
36513707	BRACKET, DYNAMO SUPPORT				1		
0746255	Setscrew, dynamo support bracket to				1		
0748414	Setscrew, dynamo support bracket to				1		
0920003	Washer, dynamo support bracket sets			1000	2		
0920053	Washer, dynamo support bracket sets	2000-100 200 0 -1000-	350		2		
36545118	LEVER, DYNAMO ADJUSTING	***	***		1		
0745045	Setscrew, dynamo adjusting lever to d		•••		1		
0920497	Washer, dynamo adjusting lever setscr	rew			2		

Note:-

†Component Parts supplied by Messrs J. Lucas Ltd.

SECTION "K"

Joints and Gaskets

Part No.	Description	Qty.	Remarks									
	LIST No. 187 ONLY											
57935	JOINTS AND GASKETS Complete		Set									
	TIMING GEAR HOUSING FRONT COVER JOINT, TIMING GEAR HOUSING HYDRAULIC Set		See Section 'H'									
	PUMP FACING COVER TO HOUSING		See Section 'F'									
57934	JOINTS AND GASKETS—REMOVAL OF HEAD	1	Set									
	LIST No. 188 ONLY											
57932	JOINTS AND GASKETS—COMPLETE ENGINE SET	1										
57931	JOINTS AND GASKETS—REMOVAL OF HEAD	1	Set									
	LIST No. 189 ONLY											
57935	JOINTS AND GASKETS Complete Fingine	1	Set									
	TIMING GEAR HOUSING FRONT COVER Set		See Section 'H'									
57934	JOINTS AND GASKETS—REMOVAL OF HEAD	1										
	LIST No. 190 ONLY											
80074	JOINTS AND GASKETS—COMPLETE ENGINE SET	1										
80075	JOINTS AND GASKETS—REMOVAL OF HEAD	1	Set									
	LIST No's. 187, 188, 189, 190											
57930	JOINTS—REMOVAL OF SUMP	1	Set									

187/188/189/190/CMC/9953

NOTES 2000

Numerical Index

Part No.	Page	Part No. Page	Part No. Page	Part No. Page
****	10	58740 31	0201467 27	0520429 17
30399 . 30428 .	25	59617 13	0201493 6	0520430 17
20176	177	59635 14	0201500 35	0520528 35
21112	-	59930 33	0201520 40	0520580 35
21222	10	80074 45	0201521 40	0540175 10
	22	80075 45	0201526 40	0560244 25
	2.5	81219 22	0230001 9	0566002 17, 19, 27, 28,
	0 0011101	01565	0240731 35	40
	07		0010000	0566003 27, 35, 36
	27			0566004 35, 36
	27	81869 14	2222712	0571095 19
	36	81870 14		0571099 19
	19	82133 14		0571346 35
	19	82210 22		0571350 39, 40
	19	82611 9		0571351 17
	19	0020011 27		0574211 6
	. 10,33	0040057 31, 33		
		0050119 14		0576001 9 0576002 6, 21, 25, 39,
		0050344 25	0380098 31, 33	43, 44
	27	0050345 21	0380164 31, 33	
	35	0070111 44	0410228 13	
32598 .	27	0070113 44	0410231 21	
33423 .	36	0095031 35	0410232 39	0576051 9, 10, 21, 27, 31,
33497 .	40	0095250 14	0420002 9	33, 36, 40
33841 .	See 32550	0095292 36	0450034 39	0576052 9
35254 .	19	0095315 40	0450035 21	0576054 9
35289 .	27	0095344 36	0450036 39	0576102 17
35504 .	40	0095345 21	0460035 33	0576103 31, 33
35532	36	0095350 27, 28	0470622 27	0576104 17
36020	See 36394	0096235 10	0490019 25	0576111 19, 27, 28, 40
36030	39	0096236 6	0490023 9	0576112 27
36143	39	0096238 25	0490024 33	0576113 35, 36
36319	See 36394	0096243 6	0490032 10	0576151 43, 44
	39	0096435 31	0490042 19	0610011 25
25452	39	0096439 33	0490044 10	0610516 14
F0703	17	00096441 33	0490115 9	0610847 35
	14	0096446 27	0490184 10, 33	0610904 21
# 10 C1	6	0096640 19	0490188 19	0623402 27
== 12=	17	0101138 17	0490189 19	0623723 36
******	14	0140034 21	0490226 19	0623754 36
	See 59635	0150008 9	0490485 9	0623769 40
55101	39	0150144 25	0490514 27	0623777 40
====0	22	0170001 14	0490520 27, 36	0623778 36
=====	5	0170033 17	0490538 35	0630082 25
57560	30	0170044 39	0490547 See 36862126	0640134 14
E7570	21	0170046 31, 33	0490559 35	0640135 14
F7504	22	0170129 39	0490579 19	0640136 14
£7020	15	0180066 10	0490595 27	0640144 25
55021	45	0180067 31, 33	0490609 19	0650203 10, 33
57022	15	0180116 19	0490628 6	0650507 17
55024	15	0180574 40	0490685 39	0650540 10, 25, 31, 33
55025	15	0180637 39, 40	0490692 6	0650566 5
50207	22	0180831 25	0490699 5	0650590 9
20201		0100001 11 11 20		0.000000
	22	0200080 10	0490701 10	0650593 3
58308	33	0200080 10	0490701 10 0490704 17	0650594 5
58308 58400	33	0201373 6	0490704 17	0650594 5
58308 58400 58704	33	0201373 6 0201397 27	0490704 17 0490706 39	0650594 5
58308 58400 58704 58705	33	0201373 6	0490704 17	0650594 5 0650599 39

Numerical Index

Dont M.	D	D . M			1		
Part No.	Page	Part No.	. Page	Part No.	Page	Part No.	Page
0650702	36	0780312	25	0920849	See 31137191	31121221	13
0650710	5	0800044	35	0920849A	See 31137192	31121231	See 31121221
0650738	5	0825241	9	0921018	35	31122311	13
0650756	39	0825258	9	0921019		31122321	
0690061		0826002	9			31122331	
				0921061			See 31122321
0720677		0826203	6	0921079		31122341	See 31122311
0720708		0826232	9	0921080	36	31123241	13
0720709		0826251	35	0921108	5	31123251	See 31123241
0720844	39	0826408	10	0921168	21	31123261	See 31123271
0726264	39, 40	0826409	36	0921241	25	31123271	
0730046	12.2	0826419	10, 33	0921246	21	31131171	
0730080	27/	0826425					
0720402				0921337	17	31131191	See 31131171
0730103	-	0826434	21	0930001	21	31134119	
0730104		0826443	36	0940192	9	31137171	See 31137201
0730128	35	0826466	9	0940868	39	31137172	See 31137202
0745045	43, 44	0826475	21	0941081	21	31137191	13
0745105	5	0826476	27	0941082	21	31137192	
0746051		0826479	9	0941083	9	31137201	
0711070		0826622					
0 = 4 < 0 = 0				0941091	21	31137202	
0746053		0826624	5	0941118	9	31141408	A CANDO MODE TO SE
0746054		0827604	22	0990572	28	31141417	44
0746251		0827609	21, 39	0994748	17	31143675	13
0746253	5	0827613	21	0994967	25	31146402	33
0746254	21, 25, 44	0827614	21	0995260	35	31146701	31
0746255	6, 22, 44	0827812	31	0997129	35	31146702	
0746256	2020	0840052	27	0997282	14	31146911	
0746257		0860012	9	0999253	36	31148615	
0746259	10 11	0870001					
0746060				0999603	40	31315134	
0816081		0900043	33	2211155	14	31315137	
0746354		0910002	9	2227063	22	31358308	
0746355		0910058	35	2411152	22	31362271	14
0746357	43, 44	0920002	19	2411157	10, 33	31365181	14
0746451	5	0920003	10, 39, 43, 44	2414111	22	31366511	14
0746452	9	0920004	10, 17, 40	2415207	31, 33	31366521	14
0746453	9	0920006	9	2415208	See 2415207	31372171	
0746454		0920007	31, 33		43	31377201	
0746455	1000	0920052	9, 10, 25, 33				
0716150				2641345	35	31431261	
0710071		0920053	5, 6, 21, 22, 25,	2641491	35	31721211	
0748351	22		35, 39, 43, 44	2646144	40	31733508	
0748411	22	0920054	9, 10, 22 ,27,	2646442	40	31747109	25
0748412	21		31, 33, 36	2656653	36	31812901	14
0748413	22, 44	0920101	22	2666102	See 2666103	31815519	17
0748414	22, 43, 44	0920103	33	2666103	19	32151113	22
0748415	22	0920106	5, 6, 10, 21, 22	26410006	35	32155117	33
0748416	21	0920107	40	26410047	2.5	32186112	
0748418	21	0920108				32186114	
0710501	N202			26510005			22
		0920109	5, 22, 31	26510006	19	32524128	5
0748524	22	0920113	40	26510007	19	32524131	5
0748525	31	0920126	27, 28	26540022	27	32532306	21, 25
0750368	31	0920146	36	26560003	36	32753409	33
0760001	17	0920154	35, 36	26560004	36	32753411	33
0780006	9	0920155	10, 33	26560006	35	32753412	31
0780007	9	0920299	6, 21, 25	26560007	35	32754411	5
0780009	17	0920336	25	26560008	36	32754414	5
0780224	35	0920497	17, 43, 44			33114118	
070000		0920497	The second secon		36		6
			19	26560010	36	33117118	5
0780243	27	0920516	9	2726194		33134418	43
				2871170	43, 44		

Numerical Index

Part No.	Page	Part No.		Page	Part No.	2	Page	Part No.			Page
33176308	13	35355183	***	39	36644139		22	37447511			31
33221115	35	35355184		39	36812113 S	ee 3681	2125	37534531		• • •	21
33221312	9	35355185		39	36812125		5	37556125		***	21
33261723	9	35355186		39	36813117		22	37556137			22
33411107	9	35355237		39	36814112		21	37556146			21
33426507	33	35355238		39	36817134		6	37711291			31
33426508	33	35355241		39	36853105		21	37712281			33
33532121	25	35355805		36	36862119		10	37725432			25
33533112	35, 36	35355807		36	36862126		35	37733191	2037		10
33555319	36	35355821		35	36865104		31	37766321			10
33825409	22	35355837		36	36866415		31	37766322			10
34417116	28	35521144	1000	21	36866424		21	37786563			19
34421408	27	35551503		28	36866428		21	37786573			19
34522125	35	35732446		25	36866711		33	38164423	200	5515	43
34715124	25	36171114		22	36884107		25	38164424			44
34821416	31	36174115		25	37161562	***	21	38611108			31
34824404	33	36236706	* *	33	37167613		22	41115004			21
35351412	36	36475706		9	37167693		22	41115005			21
35353159	39	36513707	* *	44	37167694		22	41312038			31
35353177	36	36541418	4.0	44	37171351		25	41312064			31
35353207	36	36541426	25.65	44	37188514		17	41314019			25
35355179	39	36542318		43	37354361		21	41314033	S	See 4131	4042
35355181	39	36545117	* *	43	37416203		9	41314042			25
35355182	39	36545118		44	37427443		39	41424201			25

sectori Indianautifi